

# Owner's Manual

- *Installation*
- *Use*
- *Maintenance*



Ref 300768 Rev. C  
01-23

**Pratissoli**

**NOTE: This Manual covers KFZ pumps with Serial Numbers starting at 10127003**



General Pump  
is a member of  
the Interpump Group



## INDEX

<b>1.</b>	<b>INTRODUCTION</b> .....	Page 4
<b>2.</b>	<b>SYMBOL DESCRIPTIONS</b> .....	Page 4
<b>3.</b>	<b>SAFETY</b> .....	Page 4
	3.1 General safety instructions .....	Page 4
	3.2 High pressure unit safety requirements .....	Page 4
	3.3 Safety during operation .....	Page 5
	3.4 General procedures for using nozzles .....	Page 5
	3.5 Safety during unit maintenance .....	Page 5
<b>4.</b>	<b>PUMP IDENTIFICATION</b> .....	Page 6
<b>5.</b>	<b>TECHNICAL DATA</b> .....	Page 7
<b>6.</b>	<b>DIMENSIONS AND WEIGHT</b> .....	Page 7
<b>7.</b>	<b>INFORMATION REGARDING PUMP USE</b> .....	Page 8
	7.1 Water temperature .....	Page 8
	7.2 Maximum flow and pressure values .....	Page 8
	7.3 Lowest operating RPM .....	Page 8
	7.4 Recommended lubricant types and Manufacturers .....	Page 8-9
<b>8.</b>	<b>PORTS AND CONNECTIONS</b> .....	Page 10
<b>9.</b>	<b>PUMP INSTALLATION</b> .....	Page 10
	9.1 Installation .....	Page 10
	9.2 Direction of rotation .....	Page 11
	9.3 Version change .....	Page 11-12
	9.4 Hydraulic connections .....	Page 12
	9.5 Pump feeding .....	Page 12
	9.6 Suction line .....	Page 12
	9.7 Filtering .....	Page 13
	9.8 Delivery line .....	Page 14
	9.9 Internal diameter of hose .....	Page 14
	9.10 V-belt transmission .....	Page 15
	9.11 Transmission definition .....	Page 16
	9.12 Definition of belt static tension values .....	Page 17
<b>10.</b>	<b>START UP AND OPERATION</b> .....	Page 18
	10.1 Preliminary inspections .....	Page 18
	10.2 Starting up .....	Page 19
<b>11.</b>	<b>PREVENTATIVE MAINTENANCE</b> .....	Page 19
<b>12.</b>	<b>STOPPING THE PUMP FOR LONG PERIODS</b> .....	Page 19
	12.1 Inactivity for long periods .....	Page 19
	12.2 Filling the pump with anti-corrosion emulsion or anti-freeze .....	Page 19
	12.3 Hoses .....	Page 20

**INDEX (continued)**

<b>13.</b>	<b>PRECAUTIONS AGAINST FREEZING</b> .....	<b>Page 20</b>
<b>14.</b>	<b>WARRANTY TERMS</b> .....	<b>Page 20</b>
<b>15</b>	<b>TROUBLESHOOTING</b> .....	<b>Page 20-21</b>
<b>16.</b>	<b>EXPLODED VIEWS AND PARTS</b> .....	<b>Page 22-24</b>
<b>17.</b>	<b>FLUSHING CIRCUIT DIAGRAM OF USE</b> .....	<b>Page 25</b>
<b>17.</b>	<b>MAINTENANCE LOG</b> .....	<b>Page 26</b>


## 1. INTRODUCTION

This manual describes the use and maintenance instructions of the KFZ stainless steel pump, and should be carefully read and understood before using the pump. Correct use and adequate maintenance will guarantee the pumps trouble-free operation for a long time. General Pump declines any responsibility for damage caused by misuse or the non-observance of the instructions indicated in this manual. Upon receiving the pump, check that it is complete and in perfect condition.. Should anything be found out of order, please contact us before installing and starting the pump.

## 2. SYMBOL DESCRIPTIONS

**Warning**

Potential Danger

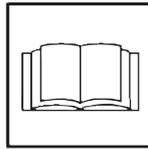

Read carefully and understand the manual before operating the pump

**Danger**

High Voltage-Electrocution Danger

**Danger**

Wear protective mask

**Danger**

Wear goggles

**Danger**

Wear protective gloves

**Danger**

Wear protective boots

## 3. SAFETY

### 3.1 General Safety Indications

The misuse of pumps and high pressure units, and the non-observance of installation and maintenance instructions may cause severe injury to people and/or damage to property. Anyone requested to assemble or use high pressure units must possess the necessary competence to do so, should be aware of the characteristics of the components assembled/used, and must adopt all the necessary precautions in order to guarantee maximum safety in any operating condition. In the interest of safety, no precaution that is reasonably feasible must be neglected, both by the Manufacturer and the Operator.

### 3.2 High pressure unit safety requirements

1. The pressure line must always be equipped with a safety valve.
2. High pressure unit components, in particular for those units working outside, must be adequately protected against rain, frost and heat.
3. The units electrical parts must be adequately protected from water spray, and must comply with the specific norms in force.
4. High pressure hoses must be correctly sized for the unit's maximum operating pressure, and must only be used within the pressure range indicated by the hose manufacturer. The same conditions apply to all other unit accessories where high pressure is involved.
5. The extremities of high pressure hoses must be sheathed and fastened to a steady structure in order to avoid dangerous whiplashes should they burst or should their connections break.
6. Appropriate safety guards must be provided for the pump transmission systems (joints, pulleys and belts, auxiliary drives).



### 3.3 Safety During Operation

The working area of a high pressure system must be clearly signaled. Access must be prohibited to non-authorized personnel and, if possible, the area must be fenced in. The personnel authorized to access this area must be previously trained, and informed about the risks that may arise from failures or malfunctions of the high pressure unit.

Before starting the unit, the operator must check:

1. That the high pressure unit is correctly fed (see paragraph 9.5).
2. That pump intake filters are perfectly clean; we advise to use a device that indicates the filters clogging level.
3. That electrical parts are adequately protected and in perfect condition.
4. That high pressure hoses do not show apparent signs of abrasion, and that fittings are in perfect shape.

Any anomaly or reasonable doubt that may arise before or during operation must be promptly reported and verified by competent personnel. In these cases, pressure must be immediately released and the high pressure unit stopped.



### 3.4 General Procedures For Using Nozzles

1. The Operator must always place his own and other worker's safety before any other interest; his actions should always be governed by good sense and responsibility.
2. The Operator must always wear a helmet with a protective visor, waterproof clothing, and appropriate boots capable of guaranteeing grip on wet pavement.

*Note: appropriate clothing will effectively protect against water spray, but it may not offer adequate protection against the direct impact of water jets or sprays from a close distance. Some circumstances may require further protection.*

3. We advise to employ a team of at least two Operators, able to provide mutual and immediate assistance if needed, and to rotate their duties in case of long and heavy work.
4. Access to the work area that is within the water jets' range must be absolutely forbidden; the area must be free of objects that may be unintentionally hit by the pressurized jet, causing damage or dangerous situations.
5. The water jet must only and always be directed towards the work area, even during testing or preliminary inspections.
6. The Operator must always pay attention to the trajectory of the debris removed by the water jet. If necessary, adequate side guards must be provided by the Operator in order to protect anything that may be accidentally exposed.
7. For no reason must the Operator be distracted during operation. The personnel that needs to access the working area must wait for the Operator to suspend his work, and then immediately make his presence known.
8. For safety reasons, it is important that each member of the team is perfectly aware of the intentions and actions of other team members in order to avoid dangerous misunderstandings,
9. The high pressure unit must not be started and brought up to pressure unless each member of the team is in his designated position, and the Operator has already directed the nozzle towards the work area.

### 3.5 Safety During Unit Maintenance

1. The maintenance of the high pressure unit must be done within the time intervals indicated by the Manufacturer, who is responsible for the entire unit's compliance with the norms in force.
2. Maintenance must always be carried out by specialized and authorized personnel.
3. Assembly and disassembly of the pump and its various components must be performed exclusively by authorized personnel, using appropriate tools in order to avoid damage to components and connections.
4. To guarantee total reliability and safety, always use original spare parts.

## 4. PUMP IDENTIFICATION

Each pump (fig. 1) has its own serial number XX.XXX.XXX (see point 1) and is equipped with a rating plate that indicates:

- Pump model and version
- Maximum RPM
- Power absorbed Hp-kW
- Flow Rate l/mn - GPM
- Pressure bar/PSI



Pump model, version and serial number must always be specified when ordering spare parts.

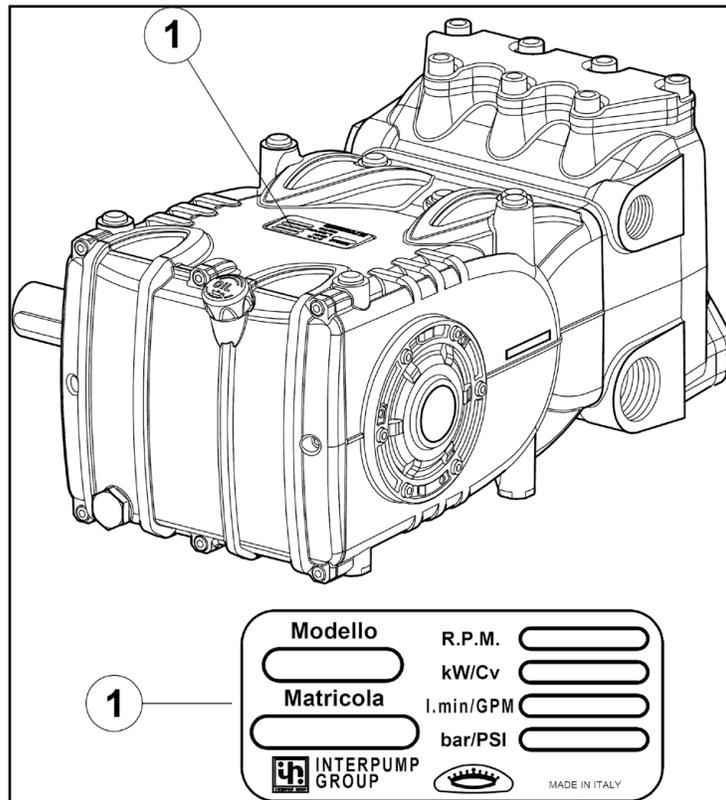



fig. 1

## 5. TECHNICAL FEATURES

MODEL	RPM	FLOW RATE		PRESSURE		POWER
		GPM	l/min	PSI	Bar	EBHP
KFZ28A	1000	24.5	93	3000	207	50
KFZ30A	1000	28.0	106	2900	200	55
KFZ36A	800	32.2	122	2300	160	50
KFZ36A	900	36.2	137	2050	140	50
KFZ36A	1000	40.0	153	1900	130	52
KFZ40A	900	45.0	170	1600	110	49

## 6. DIMENSIONS AND WEIGHT

For dimensions and weight of Standard Version pumps, please refer to fig. 2.

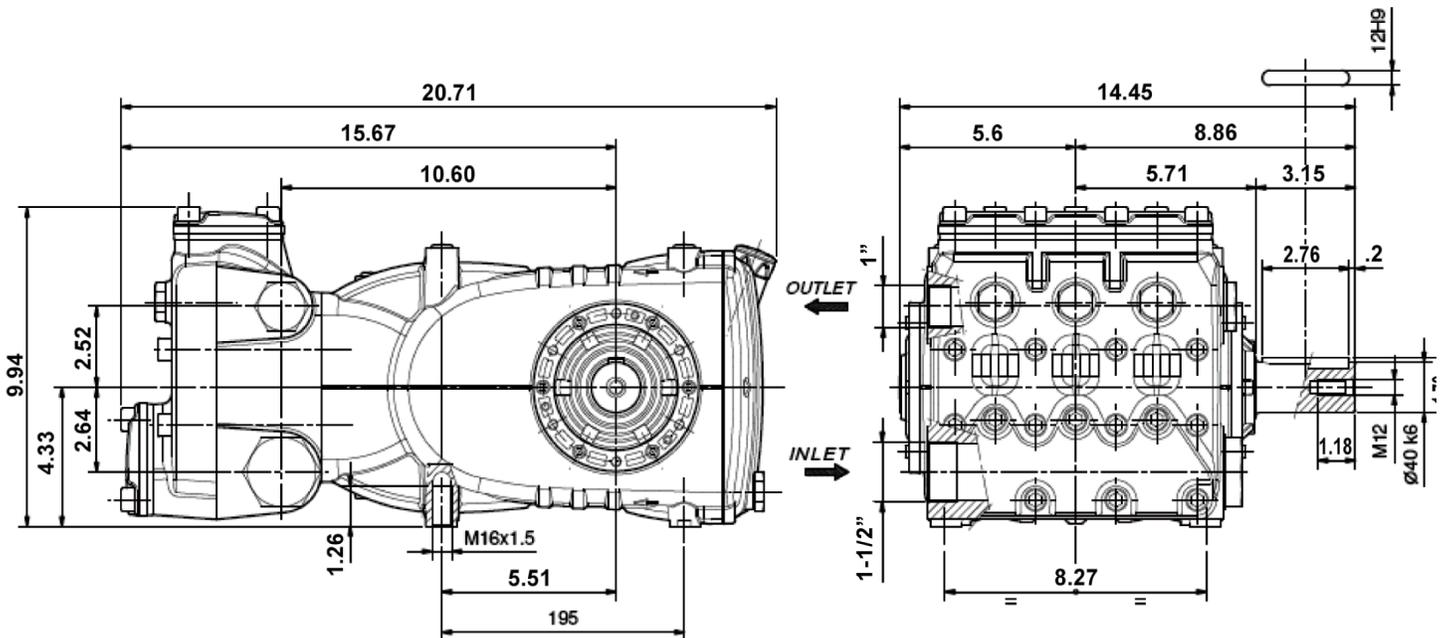

**Weight: 150 Lbs./68 Kg.**

fig. 2

## 7. INFORMATION ABOUT PUMP USE



The KFZ pump has been designed to operate with filtered water (see paragraph 9.7) and at maximum temperature of 104° F (40° C).

**Other fluids may be used only upon the approval of The Customer Service Department .**



### 7.1 Water Temperature

The max water temperature is 104° F (40° C). Nonetheless, it is possible to use the pump at temperatures of up to 185° F (85° C) for short periods of time. In this case we advise consulting the Customer Service Department.

### 7.2 Max Flow Rate and Pressure Values

The performance values indicated in the catalog refer to the maximum performance of the pump. Regardless of the power used, pressure and maximum RPM values indicated on the plate may not be exceeded unless expressly authorized by the **Customer Service Department**.

### 7.3 Lowest RPM

Any RPM value different from what is indicated in the performance table (see chapter 5) must be expressly authorized by the **Customer Service Department**.

### 7.4 Recommended Lubricant Oil Types & Manufacturers

The pump is delivered with lubricant oil compliant with room temperatures ranging between 32° and 89.6° F (0° and 30° C ). Some recommended lubricant types are indicated in the table below; these lubricants are treated with additives in order to increase corrosion protection and resistance to fatigue. As an alternative, Automotive SAE 85W-90 gearing lubricants may also be used.

BRAND	TYPE
<b>GENERAL PUMP</b>	<b>SERIES 220</b>
ARAL	Aral Degol BG220
BP	ENERGOL HLP 220
CASTROL	Hyspin VG 220, Magna 220
ELF	POLYTELIS 220
ESSO	NUTO 220
FINA	Cirkan 220
FUCHS	RENOLIN 220
MOBIL	DTE OIL BB
SHELL	TELLUS C 220
TEXACO	RANDO HD 220
TOTAL	CORTIS 220

Check the oil level by using the oil level dipstick with minimum and maximum value notches (1), fig. 3. Refill if needed. Correct oil level inspection is done with the pump at room temperature; oil is changed with the pump at working temperature, by removing the plug (2), fig 3. Checking and changing oil is to be carried out as indicated in Chapter 11. The amount required is 128.5 oz. (3.85 liters).

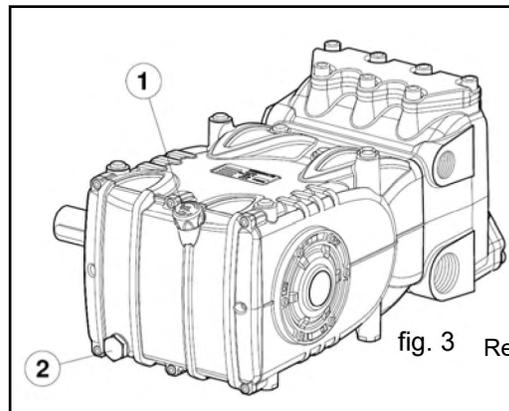



fig. 3 Ref 300768 Rev. C  
01-23



In any case, oil must be changed at least once a year since it may deteriorate by oxidation.

For room temperatures that differ from that mentioned earlier, follow the indications contained in the diagram below, keeping in mind that the oil must have a minimum viscosity of 180 cSt.

### VISCOSITY/ROOM TEMPERATURE DIAGRAM

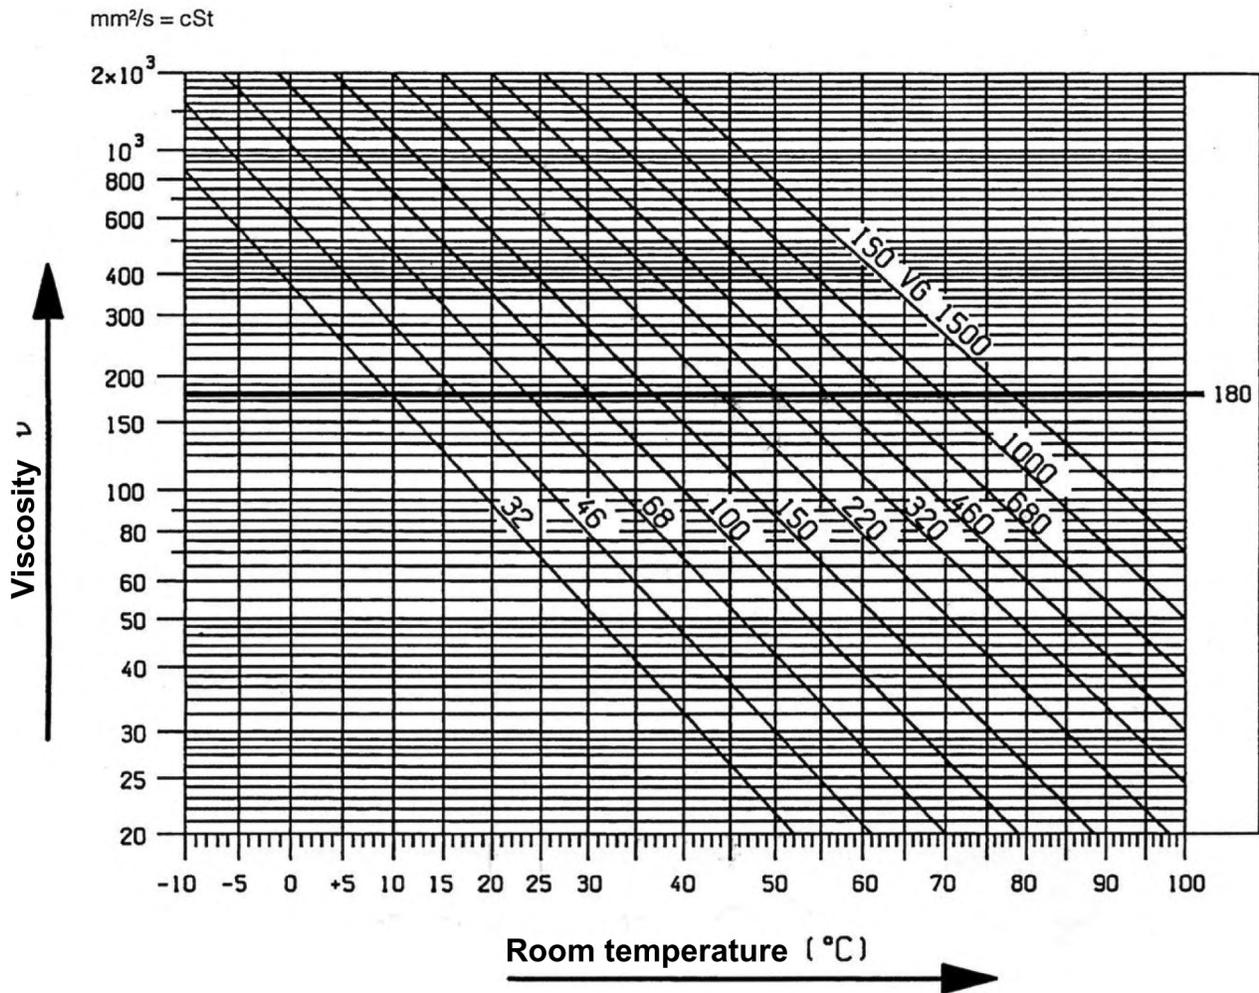


Exhausted oil must be collected in an appropriate recipient and disposed of in appropriate locations. In absolutely no case may it be dispersed into the environment.

## 8. PORTS AND CONNECTIONS

KFZ Series pumps (see fig. 4) are provided with:

1. 2 inlet ports "IN", 1-1/2" NPT-F  
The line can be connected to either of the two inlet ports; the one not being used must be hermetically sealed.
2. 2 outlet ports "OUT", Ø 1" NPT-F
3. 3 auxiliary ports; used for the pressure gauge only

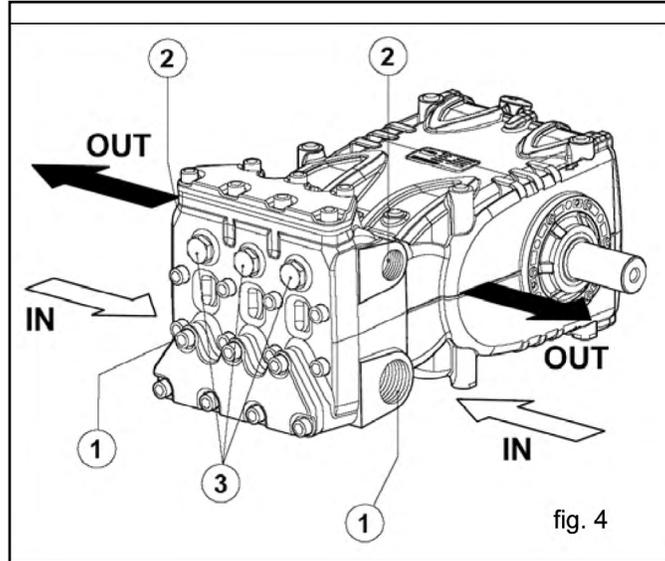

## 9. PUMP INSTALLATION

### 9.1 Installation

The pump must be installed in a horizontal position using the correct threaded feet M 16 x 1.5; fasten the screws with a torque value of 154.8 ft. lbs. (210 Nm). The base must be perfectly flat and sufficiently rigid in order to avoid bending and misalignments on the pump/transmission coupling axis due to the torque applied during operation. The unit must not be rigidly fixed to the pavement, but requires the use of anti-vibration elements. For special applications contact the **Customer Service Department**.

The pump is equipped with two lifting eyebolts to facilitate installation, as shown in the following figure.



In case of disassembly, to avoid allowing debris inside the front part of the crankcase, close the threaded hole with the threaded cap.



**Replace the oil cap (red), located on the rear crankcase cover, with the oil dipstick and check oil level.**  
The oil dipstick must always be accessible, even when the unit is assembled.




**The pump's shaft (PTO) must not be rigidly connected to the motor unit.**

The following transmission types are suggested:

- Hydraulic by means of a flange; for correct application, please contact the **Customer Service Department**
- V-belts
- Cardan Joint (please respect the maximum working angles indicated by the manufacturer)
- Flexible joint

### 9.2 Direction of rotation

An arrow situated on the crankcase near the shaft indicates the correct direction of rotation. Standing in front of the pump head, the direction of rotation must be as shown in fig. 5.

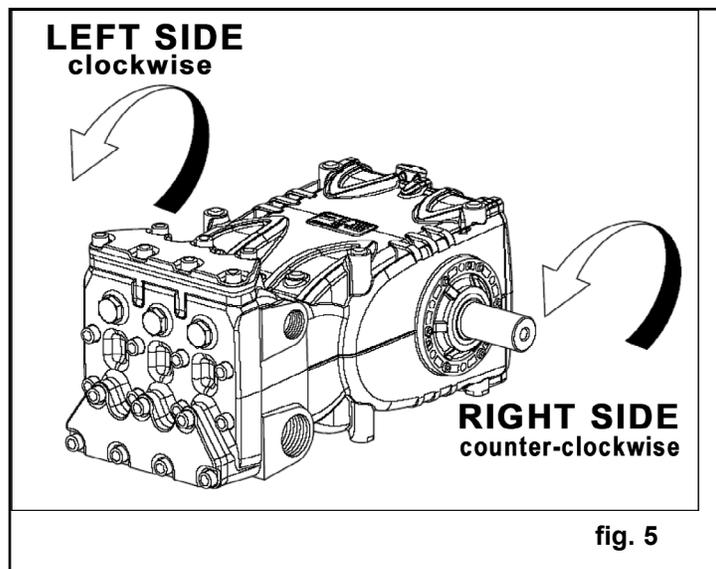

### 9.3 Version Change

A right version pump is defined when: observing the pump from the head side, the PTO shank of the pump shaft is on the right side.

A left version pump is defined when: observing the pump from the head side, the PTO shank is on the left side.

NOTE: Fig. 5 shows a right version



**The version may be changed only by specialized and authorized personnel by carefully following the instructions that follow:**

1. Separate the hydraulic part from the mechanical part as indicated in Chapter 2, paragraph 2.2.1 of the repair manual.

2. Rotate the mechanical part by 180°, and reposition the rear crankcase cover so that the oil dipstick is facing upwards; reposition the lifting bracket and the related closing caps in the upper part of the crankcase; finally, correctly reposition the identification plate in its appropriate seat on the crankcase.



**Be sure that the lower draining holes on the crankcase near the plungers are open, and not closed by the plastic caps as required for the previous version.**


3. Join the hydraulic part with the mechanical part as indicated in Chapter 2, paragraph 2.2.5 of the repair manual.

#### 9.4 Hydraulic Connections

In order to isolate the system from the vibrations produced by the pump, we advise to build the first section of the duct near the pump (both for intake and delivery) with flexible hose. The consistency of the intake section must allow to avoid deformation caused by the depressurization produced by the pump.

#### 9.5 Pump Feeding

To obtain the best volumetric efficiency, a minimum positive head of 0.20 meters is required. In case of fluid temperatures ranging from 95° F (35° C) up to 185° F (85° C) the correct inlet pressures are specified in the graph of fig. 6.

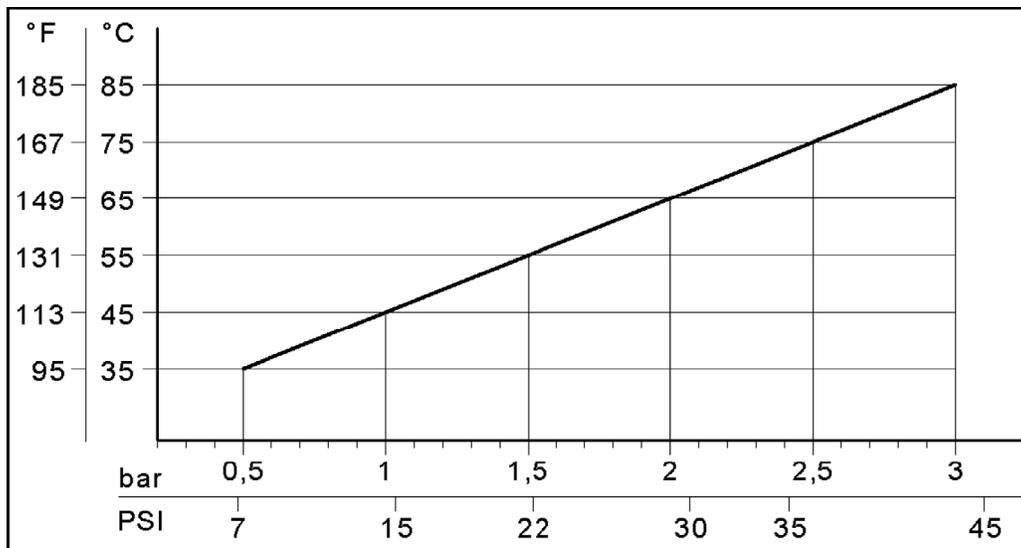

#### 9.6 Suction Line

For the pump's correct operation, the suction line must have the following characteristics:

1. Minimum internal diameter as indicated in the diagram in paragraph 9.9, and in any case equal or greater than the pump head's value.



Along the duct, avoid localized diameter reductions that may cause pressure drops with subsequent cavitation. Absolutely avoid 90° elbows, connections with other hoses, bottlenecks, counter-slopes, upside down "U" shaped curves, "T" connections.


2. The selected lay-out must allow to avoid cavitation.
3. It should be perfectly airtight, and built in a way that guarantees perfect sealing over time.
4. Avoid pump emptying when stopping (even partial emptying).
5. Do not use hydraulic-type fittings, 3 or 4 way fittings, adapters, etc., since they may hinder the pump's performance.
6. Do not install Venturi tubes or injectors for detergent intake.
7. Avoid the use of standing valves, check valves, or any other type of one-way valves.

8. Do not connect the bypass line from the valve directly to the pump suction line.
9. Provide appropriate baffle plates inside the tank in order to avoid water flows coming from both the bypass and feeding lines may create turbulence near the tank's outlet port.
10. Make sure that the suction line is perfectly clean inside before connecting it to the pump.


**9.7 Filtering**

On the pump suction line, install one filter as indicated in fig. 7 and fig. 7/a.

**Typical installation at room temperature up to 95° F (35° C)**

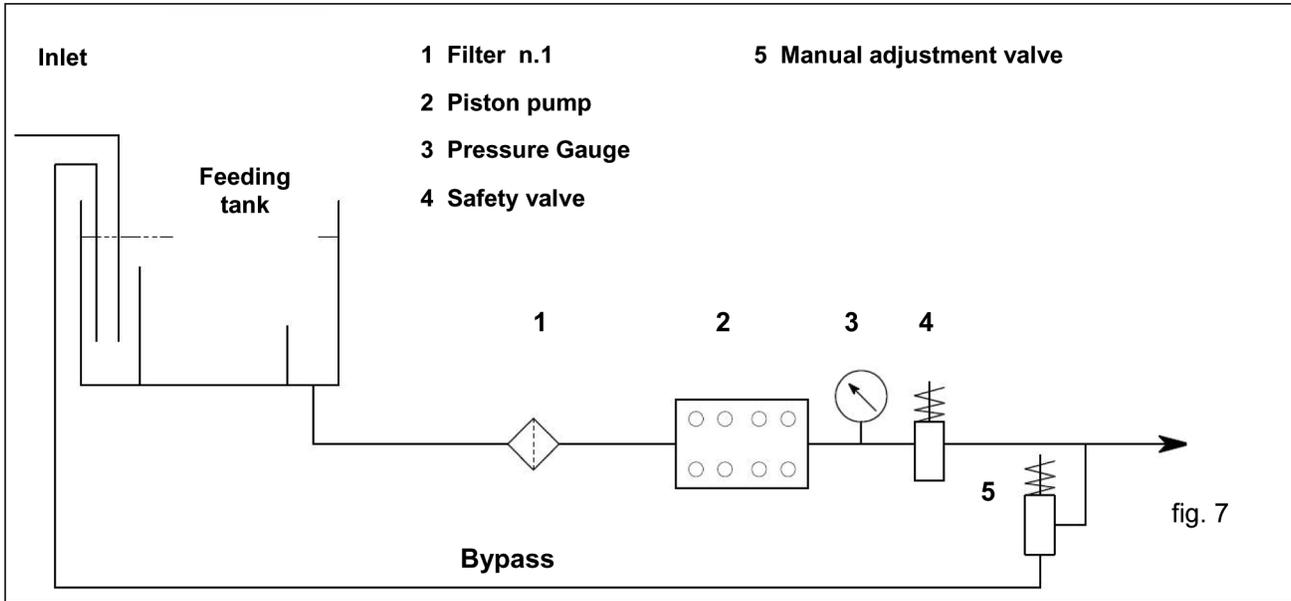

**Typical installation with hot water 95° F to 185° F (35° C to 85° C)**

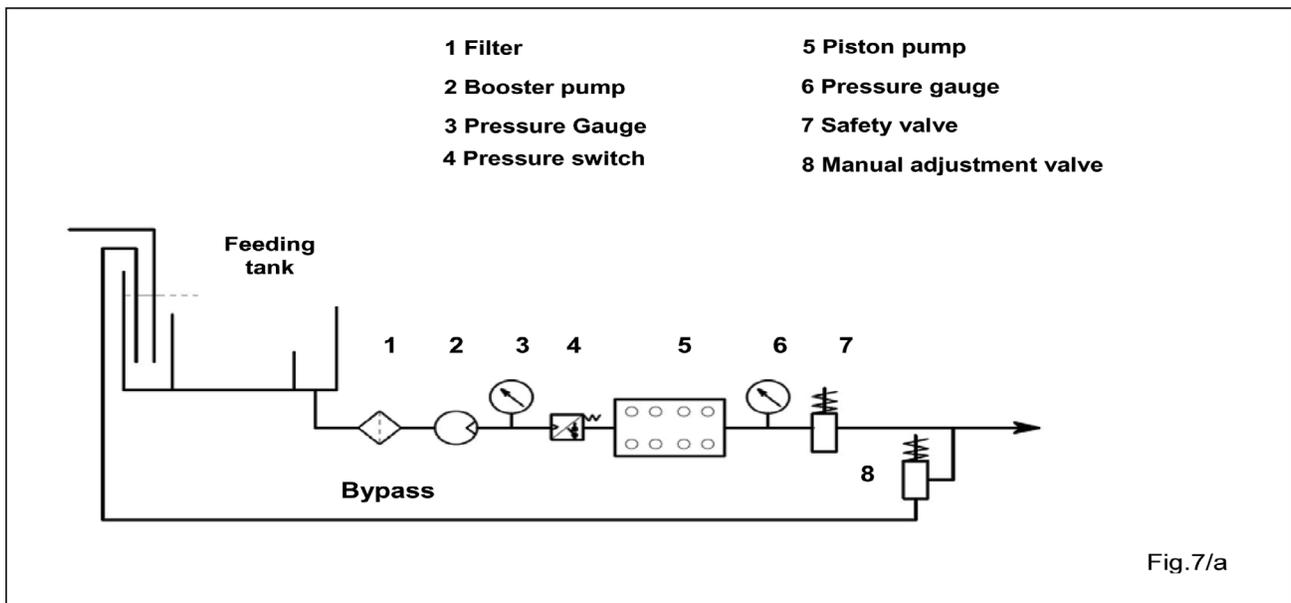

The filter must be installed as close as possible to the pump, should allow easy inspection and have the following characteristics:

1. Minimum capacity 3 times greater than the pump's rated flow value.
2. Filter port diameters must not be smaller than the pump inlet ports.
3. Filtration degree ranging between 200 and 360 µm.



In order to guarantee correct pump operation, it is important to plan periodical cleaning of the filter depending on actual pump usage, water quality and real clogging conditions.

**9.8 Delivery Line**

To obtain a correct delivery line, please comply with the following installation instructions:

1. The internal diameter of the pump must allow to guarantee correct fluid speed; see diagram in paragraph 9.9
2. The first section of the hose connected to the pump must be flexible in order to isolate pump vibrations from the rest of the system.
3. Use high pressure hoses and fittings that guarantee wide safety margins in any working condition.
4. Install a safety valve on the delivery line.
5. Use pressure switches suitable for the pulsating loads typical of plunger pumps.
6. In the design phase, take into proper account the pressure drop along the line, since this causes a reduction in usage pressure with respect to the value measured at the pump.
7. If the pump pulsations are harmful for particular applications, install an appropriately sized pulsation dampener on the delivery line.

**9.9 Internal Diameter of the Hose Line**

To determine the internal diameter of the hose, please refer to the diagram below.

**Suction Hose**


With a flow rate of ~45 GPM (170 l/mn) and water speed of 0.5 m/sec. the diagram line that connects the two scales intersects the central scale, indicating the diameters, at a value of ~ 3.15 inch (80 mm).

**Delivery Hose**

With a flow rate of ~45 GPM (170 l/mn) and water speed of 5.5 m/sec. The diagram line that connects the two scales intersects the central scale, indicating the diameters at a value of ~ 1.2 inch (30 mm).

**Optimum speed values:**

- Suction: ≤ 0.5 m/sec.
- Delivery: ≤ 5.5 m/sec.

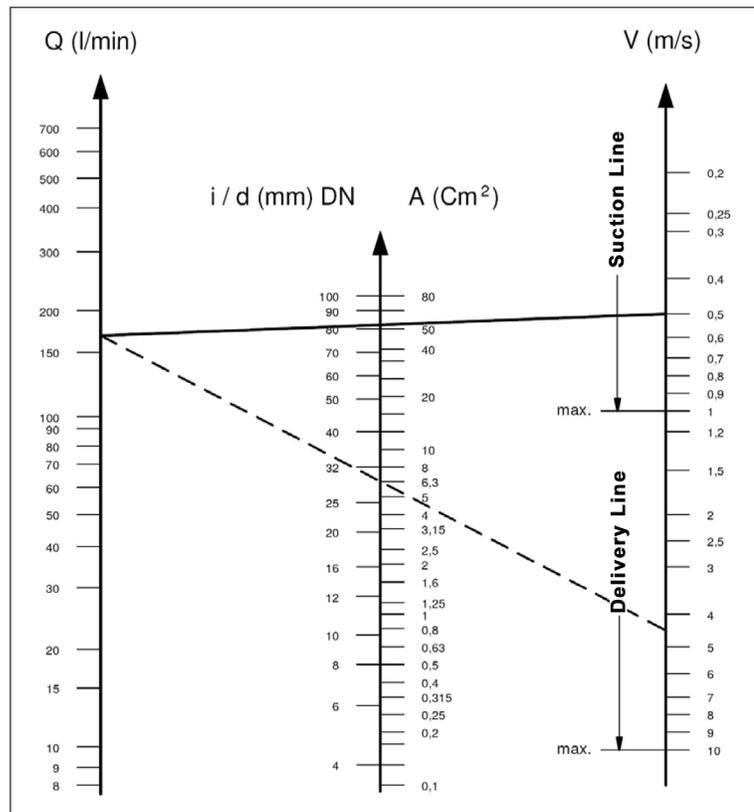



The diagram does not take into account the hose and valve resistance, the pressure drop due to the pipe length, the viscosity and the temperature of the pumped fluid. If necessary, contact our Customer Service Department.

### 9.10 V-belt Transmission

The pump may be driven by a v-belt system. For this pump model, we suggest using 4 XPB belts (16.5x13 cogged); for long durations, use the XPC profile; both the characteristics and the power transmission capacity of each belt can be verified on the diagram in **fig. 8**, in function of the number of rotations normally declared by the manufacturer. Minimum diameter of the driven pulley (on the pump shaft)  $\geq 9.8$  in. (250 mm). The radial load on the shaft must not be greater than 7500 N (value required for the definition of the lay-out). The transmission is considered adequate if this load is applied at a maximum distance of  $a=40$  mm from the shaft shoulder (PTO) as indicated in fig. 11.



For sizing that differs from that indicated above, please contact our **Customer Service Department** for assistance.

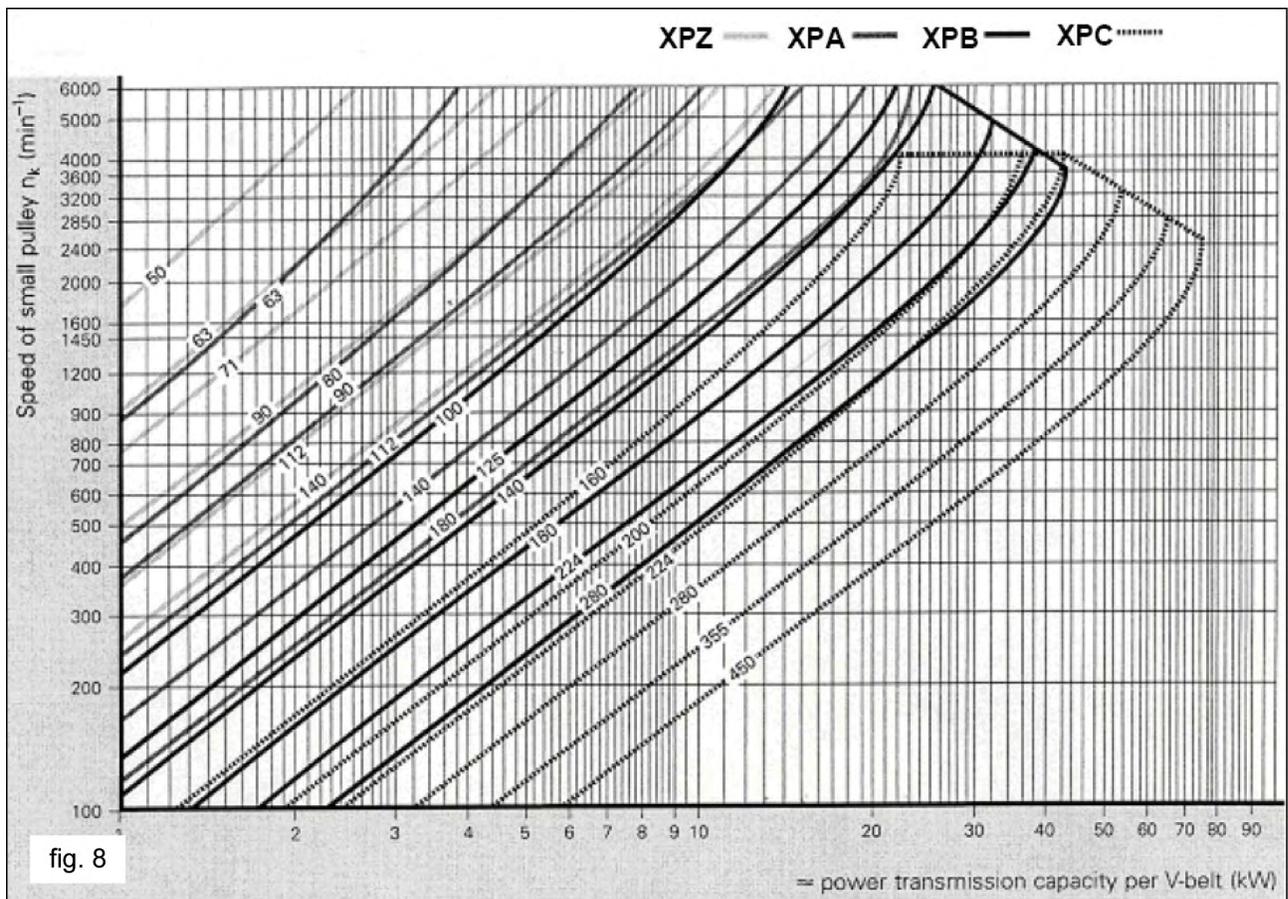
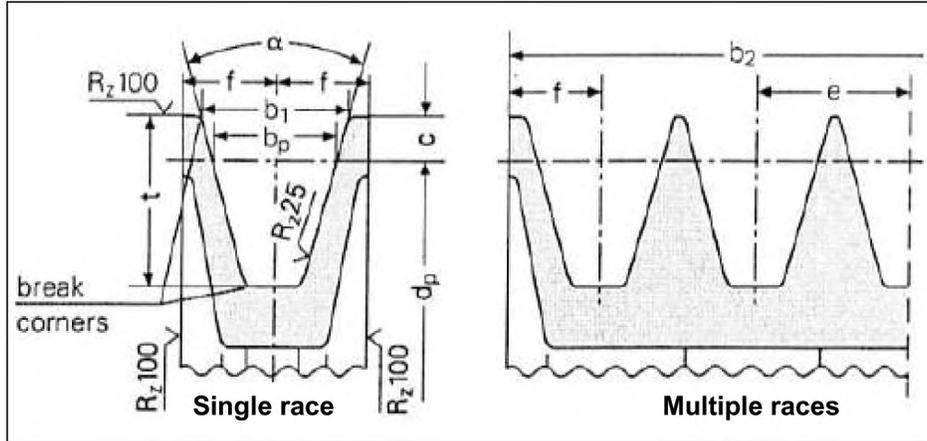


fig. 8

**9.11 Transmission Definition**

To avoid abnormal radial loads on the shaft and its related bearing, please comply with the following indications:

- a) Use pulleys with race dimensions prescribed / recommended by the belt manufacturer. Should no indications be supplied, please see **fig. 9** and the table in **fig. 10**.



**fig. 9**

Dimensions (in mm)

Belt section as indicated in DIN 7753 part 1 and B.S. 3790		symbol DIN symbol B.S./ISO	XPB/SPB SPB	XPC/SPC SPC	
Belt section as indicated in DIN 2215 and B.S. 3790		symbol DIN symbol B.S./ISO	17 B	22 C	
Pitch width		$b_w$	14.0	19.0	
Increased race width $b_1 \approx$	$\alpha = 34^\circ$		18.9	26.3	
	$\alpha = 38^\circ$		19.5	27.3	
		$c$	8.0	12.0	
Distance between races		$e$	$23 \pm 0.4$	$31 \pm 0.5$	
		$f$	$14.5 \pm 0.8$	$20.0 \pm 1.0$	
Increased race depth		$t_{min}$	22.5	31.5	
$\alpha$	$34^\circ$	For a primitive diameter narrow section v-belt DIN 7753 part 1	$d_w$	from 140 to 190	from 224 to 315
	$38^\circ$			> 190	> 315
$\alpha$	$34^\circ$	For a primitive diameter classical section v-belt DIN 2215	$d_w$	from 112 to 190	from 180 to 315
	$38^\circ$			> 190	> 315
Tolerance for $\alpha = 34^\circ - 38^\circ$			$\pm 1^\circ$	$\pm 30'$	
Pulleys per $b_2$ per number of races $z$ $b_2 = (z-1)e + 2f$			1	29	40
			2	52	71
			3	75	102
			4	98	133
			5	121	164
			6	144	195
			7	167	226
			8	190	257
			9	213	288
			10	236	319
			11	259	350
			12	282	381

**fig. 10**

- b) Use high efficiency belts - for example **XPB** instead of **SPB**; this will allow to use a lower number of belts to transmit the same power, and consequently a minor distance of the resultant from the shaft shoulder (PTO), "a" in **fig. 11**.

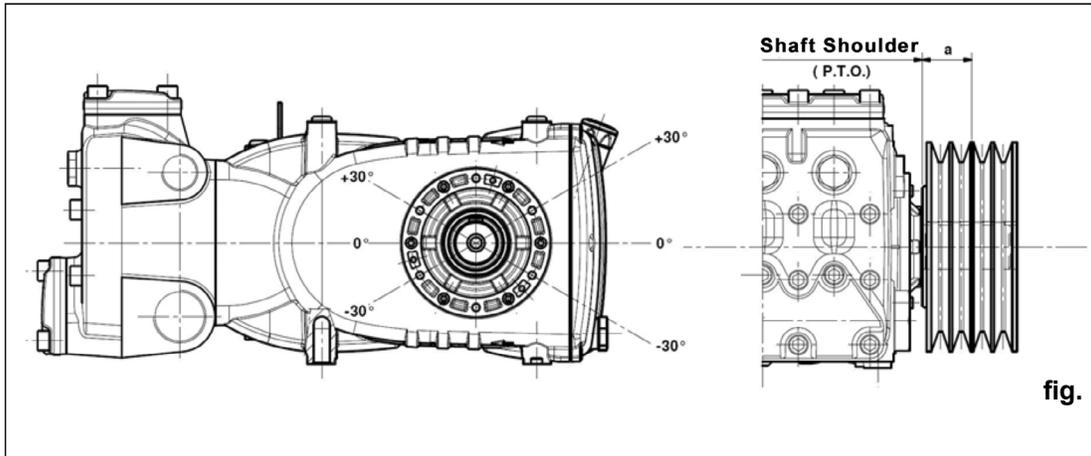


fig. 11


- c) Set belt tension according to the Manufacturer's suggestions; an excessive value will abnormally stress the bearing, reduce its duration and cause premature wear of the pulley. The tension value depends on different variables as indicated in paragraph 9.12.
- d) Belt length has a natural tolerance  $\geq \pm 0.75\%$ ; for this reason the 4 belts must be purchased in pairs
- e) Follow the belt tension directions as indicated in **fig. 9**; for different needs, please contact the **Customer Service Department**.
- f) Carefully align driver pulley and driven pulley races.

### 9.12 Definition of belt static tension values


Static tension depends on:

- a) The center distance between the two pulleys (belt length).
- b) The load due to the belt's static tension.
- c) The number of belts.
- d) The angle of wrap of the smallest pulley.
- e) Average speed.
- f) Etc.

For belts with an XPB profile, the diagram in **fig. 12** allows to obtain the values of the static tension that must be applied vs. the center distance between pulleys.

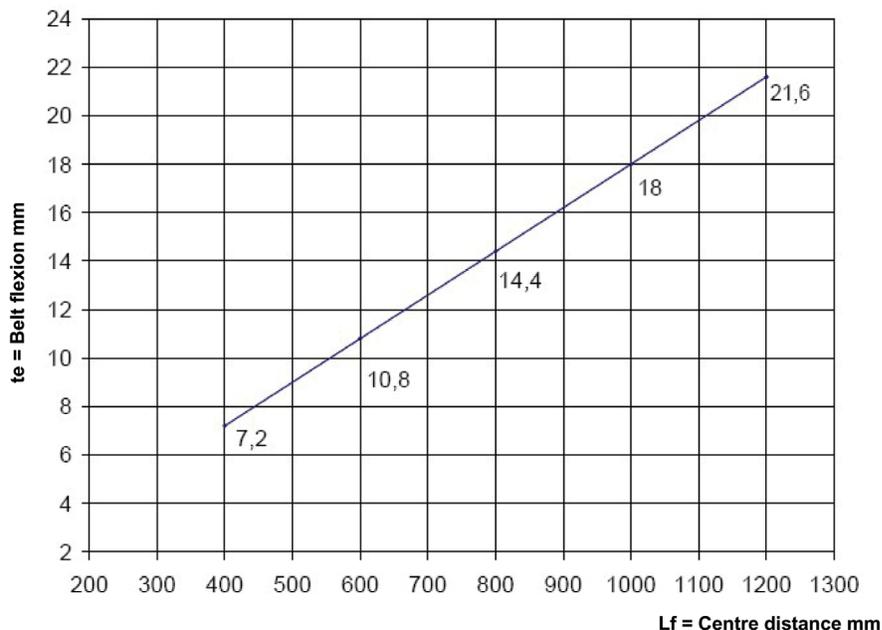

Finally, given a distance between pulley centers of 23.6 inches (600 mm) and a load of 75 N at the middle of the distance, a belt flexion “te” of around .425 inch (10.8 mm) will confirm the correct belt tension as shown in **fig. 13**.

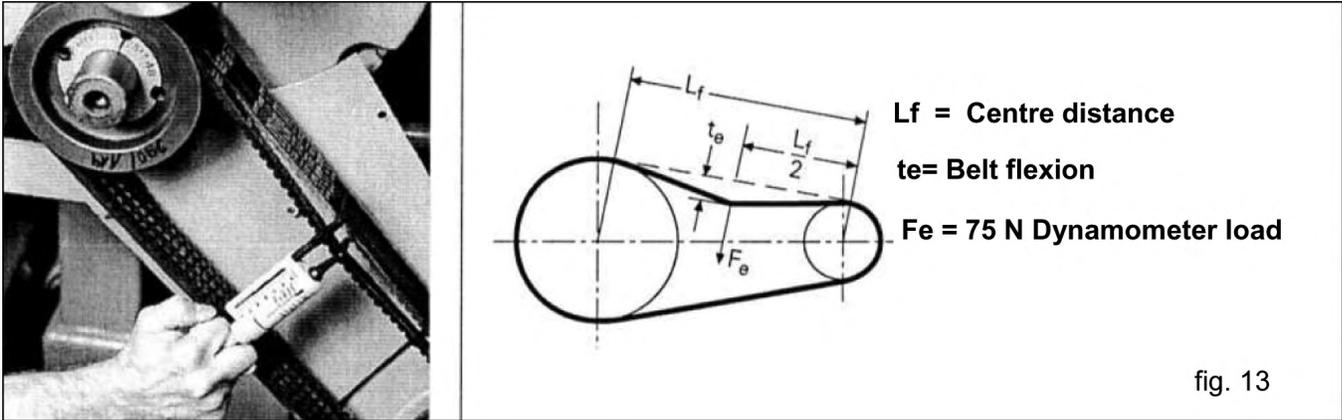

**Note 1:** If not differently indicated by the belt Manufacturer, the inspection of the correct tension value, and the related tension adjustment if needed is to be carried out after at least 30 minutes of operation in order to obtain belt setting. The best efficiency and maximum belt life is obtained with the correct tension value.

**Note 2:** If required, or during normal maintenance, never replace a single belt, but the entire set.

## 10. START-UP AND OPERATION


### 10.1 Preliminary Inspections

Before Start-up Be sure that:



**The suction line is connected and up to pressure (see Chapter 9) the pump must never run dry.**

1. The suction line must be perfectly airtight.
2. All the On-Off valves between the pump and the feeding source are completely open. The delivery line must discharge freely in order to allow the air in the pump to be ex-pulsed easily, thus facilitating pump priming.
3. All suction/delivery connections and fittings must be correctly tightened.
4. Coupling tolerances on the pump/transmission axis (half-joint misalignment, Cardan inclination, belt tightening, etc.) must remain within the limits indicated by the transmission Manufacturer.
5. The pump's oil level must be verified using the correct dipsticks (position 1, fig 14), and especially by means of the oil sight glass (position 2, fig. 14).

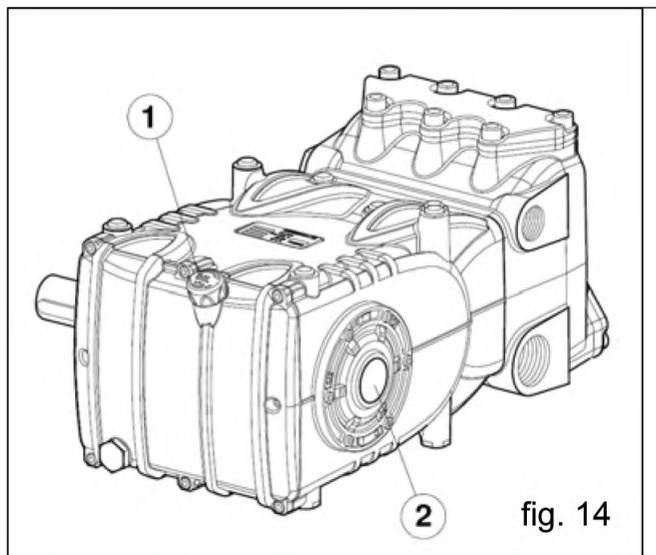



In case the pump has not run for a long period of time, verify the correct operation of the suction and delivery valves.

**10.2 Start-up**

1. When starting the pump for the first time, check for the correct direction of rotation.
2. The pump must be started off-load.
3. Verify correct feeding pressure.
4. During operation, check that the rotating speed does not exceed the rated value.
5. Before putting the pump under pressure let it run for at least 3 minutes.
6. Before stopping the pump, release the pressure by acting on the adjustment valve or on any discharging device.

**11. PREVENTIVE MAINTENANCE**

To guarantee pump reliability and efficiency, respect the maintenance intervals as indicated in the table below.

PREVENTIVE MAINTENANCE	
EVERY 500 HOURS	EVERY 1500 HOURS
Check oil level	Change oil
	Check / Replace: <ul style="list-style-type: none"> <li>• Valves</li> <li>• Valve seats</li> <li>• Valve springs</li> <li>• Valve guides</li> </ul>
	Check / Replace: <ul style="list-style-type: none"> <li>• H.P packings</li> <li>• L.P. packings</li> </ul>

**12. STOPPING THE PUMP FOR LONG PERIODS****12.1 Inactivity For Long Periods**

If the pump is started up for the first time after a long period from the shipment date, before starting operation check the oil level, check the valves as indicated in Chapter 10, and follow the start-up procedures described.

**12.2 Filling the Pump With An Anti-Corrosion Emulsion or Anit-freeze By Using An External Diaphragm Pump As In The Layout Shown in Paragraph 9.7.**

- a) Close the filter draining, if open.
- b) Be sure that the connecting hose is clean, spread with grease and connect it to the high pressure outlet port.
- c) Fit a suction hose to the membrane pump. Open the pump suction connection and fit hose between it and the membrane pump.
- d) Fill the container with the solution/emulsion.
- e) Put the free extremities of the suction line and the high pressure outlet hose inside the container.
- f) Start up the diaphragm pump.
- g) Pump the emulsion until it comes out of the high pressure hose.
- h) Continue pumping for at least another minute; if needed, the emulsion can be reinforced by adding, for example, Shell Donax
- i) Stop the pump, remove the hose from the suction connection and close it with a plug.
- j) Remove the hose from the high pressure outlet port. Clean, grease and plug both connections and the hoses.

**12.2 Hoses**

- a) Before greasing and protecting the hoses according to the previously described procedure, dry the connections using compressed air.
- b) Cover with polyethylene.
- c) Do not wrap them too tightly; be sure there is no bending.

**13. PRECAUTIONS AGAINST FREEZING**

In areas and periods of the year where there is risk of freezing, follow the instructions indicated in Chapter 12 (see paragraph 12.2).



**In the presence of ice, in no case must the pump be started until the entire circuit has been completely thawed out; not complying with this indication may cause serious damage to the pump.**

**14. WARRANTY TERMS**

The duration and the terms of the warranty are contained in the purchase contract. The warranty is void if:

- a) The pump has been used for purposes that differ from that agreed.
- b) The pump has been fit with an electric or diesel engine with performance greater than that indicated in the table.
- c) The required safety devices were not adjusted or disconnected.
- d) The pump was used with accessories or spare parts not supplied by General Pump.
- e) Damage was caused by:
  - 1) improper use
  - 2) the non-observance of maintenance instructions
  - 3) use not compliant with operating instructions
  - 4) insufficient flow rate
  - 5) faulty installation
  - 6) incorrect positioning or sizing of the hoses
  - 7) non-authorized design changes
  - 8) cavitation

**15. TROUBLESHOOTING****The pump does not produce any noise at start-up:**

- The pump is not primed and is running dry
- There is no water in the inlet line
- The valves are blocked
- The delivery line is closed and does not allow the air in the pump to be discharged

**The pump pulses irregularly (knocking):**

- Air suction
- Insufficient feeding
- Bends, elbows, fittings along the suction line obstruct the fluid's passage
- The inlet filter is dirty or too small
- The booster pump, where provided, supplies insufficient pressure or flow rate
- The pump is not primed due to insufficient head or the delivery line is closed during priming
- The pump is not primed due to valve seizing
- Worn valves
- Worn pressure packings
- Incorrect operation of the pressure adjustment valve
- Transmission problems

## 15. TROUBLESHOOTING (cont)



### The pump does not deliver the rated flow / is noisy:

- Insufficient feeding (see the causes listed above)
- RPM are less than the rated value
- Excessive amount of water by-passed by the pressure adjustment valve



- Worn valves
- Leakage from the pressure packings
- Cavitation due to:
  - 1) Wrong sizing of the suction hose/ undersized diameters
  - 2) Insufficient flow rate
  - 3) High water temperature



### Insufficient pump pressure:

- The nozzle (or has become) too large
- Insufficient RPM
- Leakage from the pressure packings
- Incorrect operation of the pressure adjustment valve
- Worn valves



### Overheated pump:


- The pump is overloaded (pressure or RPM exceed the rated values)
- Oil level is too low, or the oil is not of a suitable type, indicated in Chapter 7 (see paragraph 7.4)
- Incorrect alignment of the joint or pulleys
- Excessive inclination of the pump during operation



### Pump vibrations or knocking:

- Air suction
- Incorrect operation of the pressure adjustment valve
- Valve malfunction
- Irregular drive transmission motion

**16. EXPLODED VIEW AND PARTS LIST**

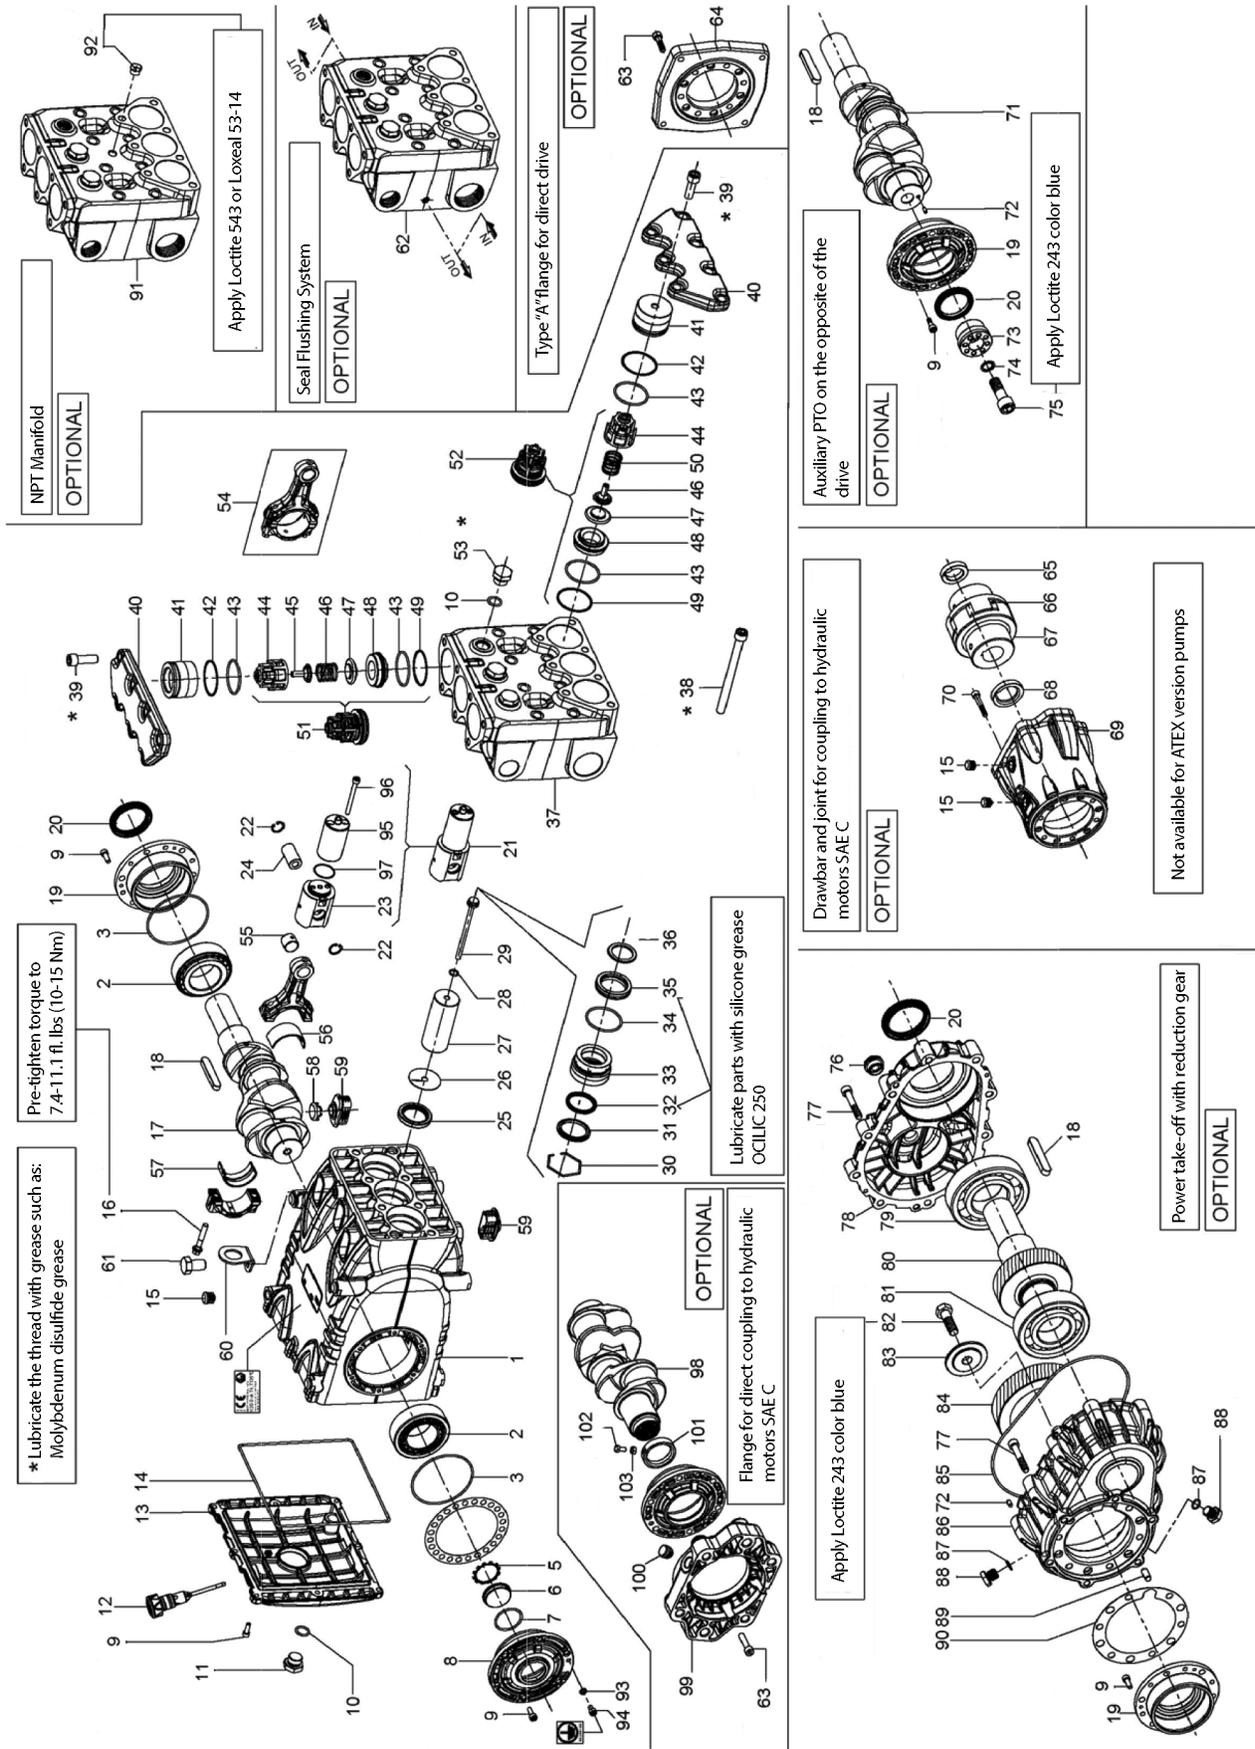

Item	Part #	Description	QTY.
1	71010022	Crankcase	1
2	91859000	Bearing, Taper Roller	2
3	90391800	O-ring, Ø94.92 x 2.62	2
4	F71220081	Spacer, 0.1 mm	1
	F71220381	Spacer, 0.25 mm	1
5	90075600	Retainer Clip	1
6	70211801	Oil Sight Glass	1
7	90387700	O-ring, Ø39.34 x 2.62	1
8	F71150122	Cover, Bearing	1
9	F99186800	Screw, TCEI, M6 x 18	20
10	F90384100	O-ring, Ø17.13 x 2.62	4
11	F98218100	Plug	1
12	98212000	Oil Dipstick	1
13	F71160022	Cover, Crankcase	1
14	F90400000	O-ring, Ø215.0 x 3	1
15	98206000	Plug, Black Rubber	4
16	F99313800	Screw, Connecting Rod, M8 x 1 x 48	6
17	F71020035	Crankshaft	1
18	F91500000	Key	1
19	F71150022	Cover, Bearing	1
20	90170000	Seal, Oil Crankshaft, Ø50 x 65 x 8	1
21	71606601	Plunger Guide, Complete	1
22	F90060600	Ring	6
23	71050015	Plunger Guide	3
24	F97743000	Pin, Plunger	3
25	90167800	Seal, Oil, Plunger, Rod Ø 38 x 52 x 7	3
26	96714000	Washer, Flinger	3
27	F71040609	Plunger, Ø28 x 95	3
	F71040309	Plunger, Ø30 x 95	3
	F71040409	Plunger, Ø36 x 95	3
	F71040509	Plunger, Ø40 x 95	3
28	90367100	O-ring, Ø11 x 2	3
29	F71223856	Plunger Screw	3
30	F90079700	Circlip, 52 mm	3
31	F71227266	Ring, Seal, Ø28	3
	F71226666	Ring, Seal, Ø30	3
	F71225466	Ring, Seal, Ø36	3
	F71224066	Ring, Seal, Ø40	3
32	90238100	Seal, L.P., Ø28 mm	3
	90275950	Seal, L.P., Ø30 mm	3
	90240000	Seal, L.P., Ø36 mm	3
	90245000	Seal, L.P., Ø40 mm	3
33	F71227366	Support, Gasket, Ø28	3
	F71226766	Support, Gasket, Ø30	3
	F71225366	Support, Gasket, Ø36	3
	F71223966	Support, Gasket, Ø40	3
34	90389100	O-ring, Ø 52.07 x 2.62	3
35	90238000	Seal, H.P., Ø28	3
	90277100	Seal, H.P., Ø30	3
	90241000	Seal, H.P., Ø36	3
	90246000	Seal, H.P., Ø40	3
36	F70222266	Seal Spacer, Ø28 & 30	3
	F71225566	Seal Spacer, Ø36	3
	F71212366	Seal Spacer, Ø40	3
37	F71128636	Manifold, Ø28 & 30	1
	F71127736	Manifold, Ø36	1
	F71127536	Manifold, Ø40	1
38	F99448200	Screw, TCEI, M12 x 150	8
39	F99429500	Screw, TCEI, M12 x 35	14
40	F71223636	Cover, Valve	2
41	F71223766	Valve Plug	6
42	F90525000	Anti-extrusion Ring, Ø50.9 x 55 x 1.5	6
43	90388900	O-ring, Ø48.89 x 2.62	12
44	36204505	Guide, Valve	6
45	F94755000	Spring, Ø25.2 x 26	3
46	F36208651	Internal Valve Guide	6

Item	Part #	Description	QTY.
47	F36209602	Poppet Valve	6
48	F36207256	Valve Seat	6
49	F90524000	Anti-extrusion Ring, Ø49.5 x 54 x 1.5	6
50	F94754000	Spring, Ø24.7 x 27	3
51	F26715601	Outlet Valve Packing	3
52	F36715501	Inlet Valve Packing	3
53	F98218100	Valve Plug	3
54	F71030701	Connecting Rod	3
55	F90911000	Bronze Bushing	3
56	F90624000	Babbit Bearing, Load Side, Smooth	3
	F90924100	Babbit Bearing, Load Side, +0.25	3
	F90924200	Babbit Bearing, Load Side, +0.50	3
57	F90924300	Babbit Bearing, Non Load Side	3
	F90924400	Babbit Bearing, Non Load Side, +0.25	3
	F90924500	Babbit Bearing, Non Load Side, +0.50	3
58	F71225951	Cap, Vented	3
59	F71225851	Plug, Drain	6
60	F71223074	Eyebolt	1
61	F99426600	Screw, M12x25	1
62	F71128736	Manifold, Flushing	1
63	F99309800	Screw, M8x35	6
64	F10067720	Flange	1
65	F10074570	Spacer, Ø31.75	1
66	F10074947	Flexible Coupling, 55	1
67	F10742801	Flexible Coupling, Ø40x31.75	1
68	F10074670	Spacer, Ø40	1
69	F10075020	Hydraulic Motor Flange	1
70	F99314600	Screw, M8x50	6
71	F21020735	Crankshaft, PTO	1
72	F97615200	Pin	1
73	F71226554	Auxiliary PTO	1
74	F97594000	Washer, Ø17x24x1	1
75	F99514200	Screw, M16x45	1
76	F97594000	Oil Sight Glass	1
77	F90394800	O-ring, Ø209.22x2.62	1
77	F99314600	Screw, M8x50	16
78	F72210920	Cover, Gearbox	1
79	F91859300	Bearing	1
80	F10070835	Pinion, Z27, 1250	1
	F10070935	Pinion, Z25, 1500	1
	F10071035	Pinion, Z22, 1830	1
81	F91857700	Bearing	1
82	F99430700	Screw, M12x40	1
83	F72211055	Gear Mounting Washer	1
84	F10071135	Ring Gear, Z34, 1250	1
	F10071235	Ring Gear, Z37, 1500	1
	F10071335	Ring Gear, Z40, 1830	1
85	F90394800	O-ring, Ø209.22x2.62	1
86	F72210020	Reduction Gear	1
87	701013	O-ring, Ø10.82x1.78	2
88	F98204250	Plug	2
89	F97618500	Pin, Ø8x18	1
90	F72210784	Packing Gear Housing	1
91	F71128536	Manifold, NPT, Ø36	1
	F71127636	Manifold, NPT, Ø40	1
92	F98209800	Plug, 3/8"x10	1
93	F96693950	Washer, Ø6.4x11x0.7, ATEX	1
94	F99180900	Screw, M6x10, ATEX	1
95	F71050866	Plunger Guide Rod,	3
96	F99199400	Screw, M6x65	6
97	F90352800	O-ring, Ø29x1.5	3
98	F71020835	Crankshaft, Hydraulic, SAE-C	1
99	F10085422	Hydraulic Motor Flange, SAE-C	1
100	F90206500	Plug, Ø1	1
101	F71228971	Ring, Ø40	1
102	F70227034	Screw, M6x12	1
103	F98202500	Nut, M6x5	1
	200082	Bolts, M16-1.5 x 40	4
	200083	Lock Washer, M16	4

**REPAIR KITS**

KIT NUMBER	<b>F2119 Plunger Packing Kit KFZ28A</b>	<b>F2204 Plunger Packing Kit KFZ30A</b>	<b>F212 Plunger Packing Kit KFZ36A</b>	<b>F2033 Plunger Packing Kit KFZ40A</b>
Positions Included	32, 35	32, 35	32, 35	32, 35

KIT NUMBER	<b>F2042 Suction Valve Kit</b>
Positions Included	52

KIT NUMBER	<b>F2043 Outlet Valve Kit</b>
Positions Included	51


KIT NUMBER	<b>F2210 Complete Seals Kit</b>	<b>F2205 Complete Seals Kit</b>	<b>F2123 Complete Seals Kit</b>	<b>F2044 Complete Seals Kit</b>
Positions Included	3, 5, 7, 10, 14, 20, 25, 28, 32, 35, 42, 43, 49	3, 5, 7, 10, 14, 20, 25, 28, 32, 35, 42, 43, 49	3, 5, 7, 10, 14, 20, 25, 28, 32, 35, 42, 43, 49	3, 5, 7, 10, 14, 20, 25, 28, 32, 35, 42, 43, 49

KIT NUMBER	<b>F2135 Connecting Rod Bushing Kit (Standard)</b>	<b>F2154 Connecting Rod Bushing Kit (+0.25)</b>	<b>F2155 Connecting Rod Bushing Kit (+0.50)</b>
Positions Included	56, 57	56, 57	56, 57

**TORQUE SPECS\***

ITEM	Ft-lbs	Nm
9	7.4	10
11	29.5	40
16	22.2	30
29	14.8	20
38	44.3	60
39	88.5	120
53	29.5	40
61	29.5	40
63	29.5	40
70	29.5	40
76	7.4	10
75	265.5	360
77	29.5	40
82	51.6	70
88	29.5	40
92	22.2	30
96	7.4	10
102	7.4	10

## FLUSHING CIRCUIT DIAGRAM OF USE

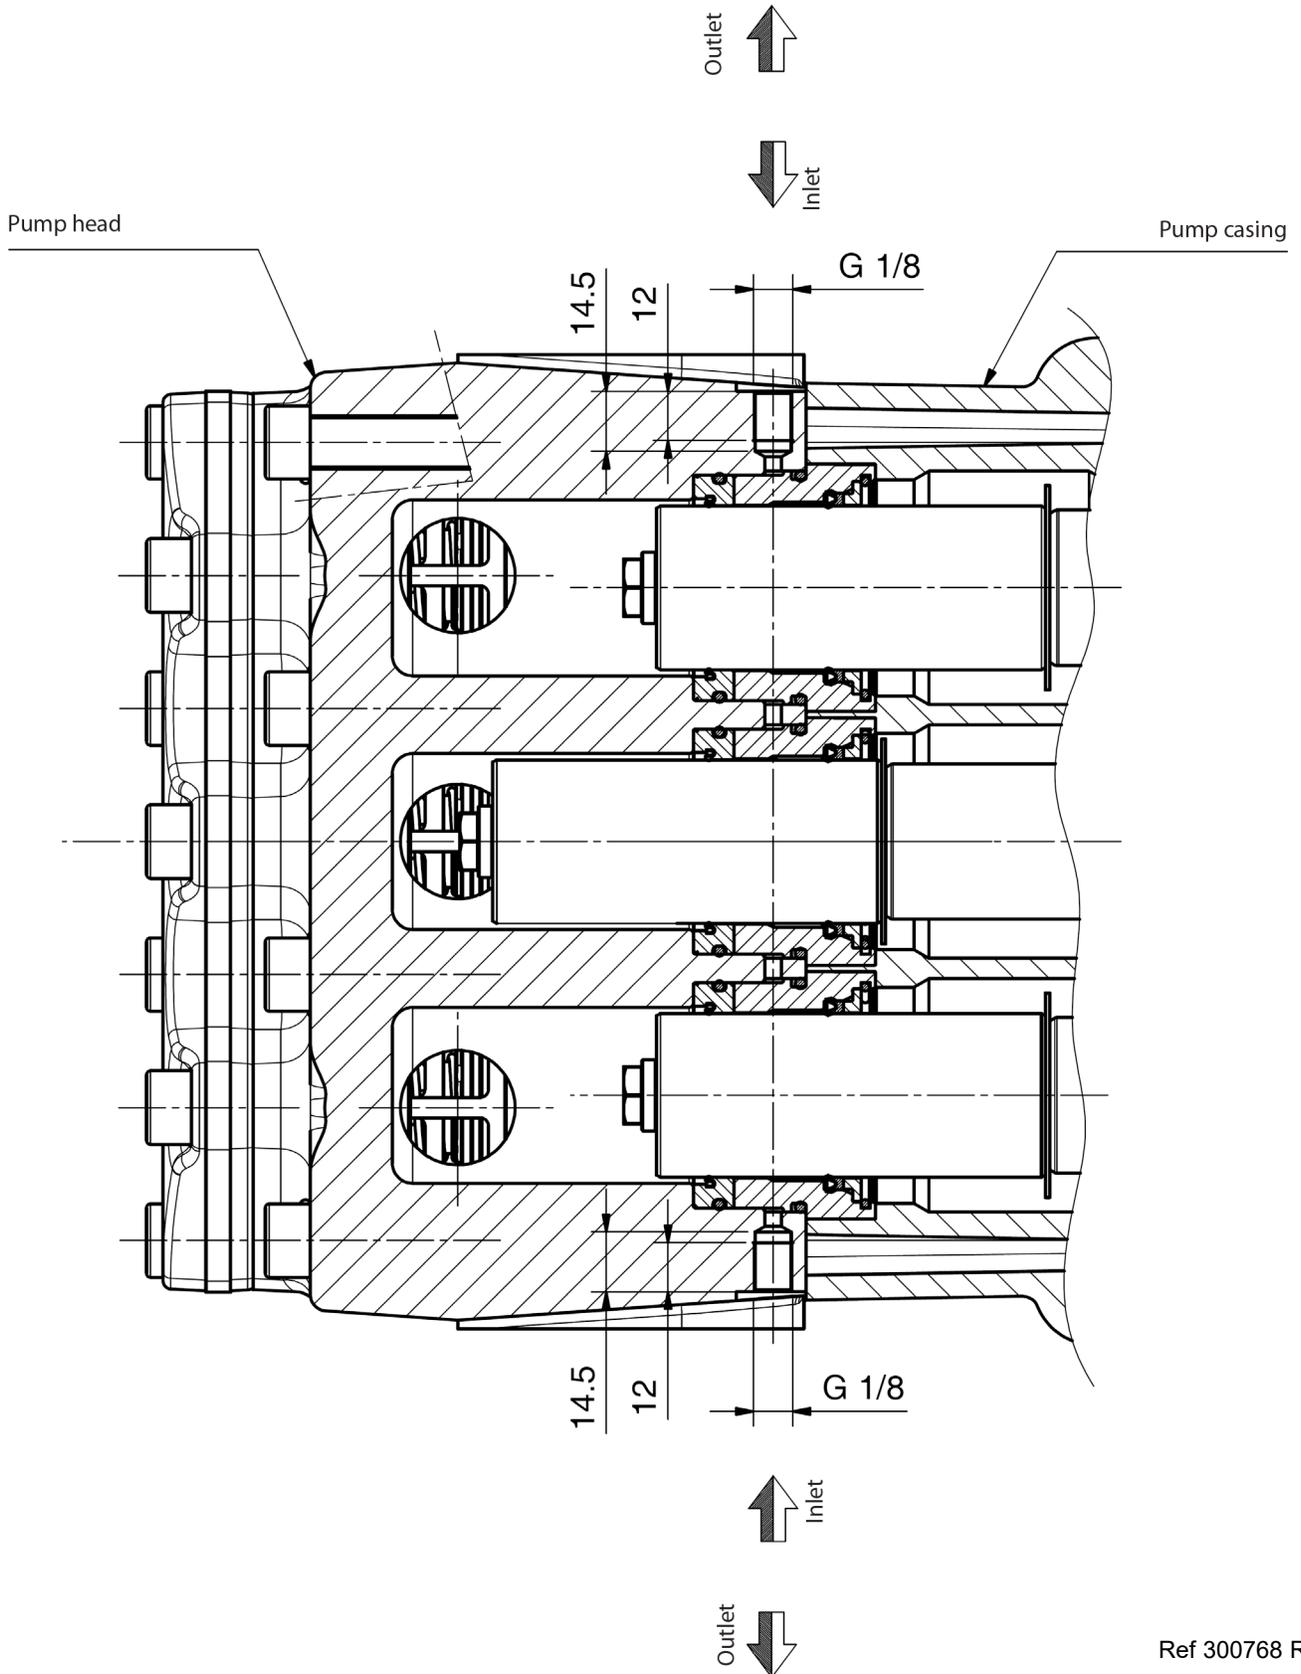

## MAINTENANCE LOG

### HOURS & DATE

<b>OIL CHANGE</b>							
<b>GREASE</b>							
<b>PACKING REPLACEMENT</b>							
<b>PLUNGER REPLACEMENT</b>							
<b>VALVE REPLACEMENT</b>							



GP Companies, Inc.  
1174 Northland Drive  
Mendota Heights, MN 55120  
Phone: 651.686.2199 Fax: 800.535.1745  
www.generalpump.com email: sales@gpcompanies.com

Ref 300768 Rev. C  
01-23