

D20015-Telescoping Wand Belt

BELT ASSEMBLY:

Unbuckle the pole clamp from the belt.

Attach the pole clamp to the pole about 16 inches from the end of the pole (gun end).

Do not tighten the clamp.

Position the belt around the operator's waist, buckle, and pull snug.

Position the shoulder strap from back to front, buckle, and pull snug.

Buckle the pole clamp to the belt and place the clamp in a comfortable position on the pole.

Tighten the pole clamp to the pole.



BELT ASSEMBLY/DIRECTIONS:

The belt is like any normal belt - it fits around a person's waist with (if you are right handed) the aluminium pole clamp to your right hip side. There is a nylon strap attached to the belt that you can adjust, so the belt is clipped snugly into place around your waist.

There are two plastic openings on the one end of the belt with the smaller opening used to insert the clip on the nylon belt strap, which is wrapped in place around your waist. The larger second opening is for the adjustable shoulder harness which you cross over your opposite shoulder (left shoulder) from back to front so the clip is inserted at the same location that you just secured the nylon strap onto the belt.

To attach the belt to the telescoping wand, first unclip the nylon strap holding the aluminium clamp from the belt. Securely fasten the aluminium clamp to the telescoping pole in a position that the operator chooses. Tighten with a screwdriver so that the clip is positioned so it can be fastened back into the belt. Clip the nylon strap, which is now clamped onto the telescoping wand, back into the belt and you are ready to operate the telescoping wand with the belt securely assembled.