GENERAL PUMP A member of the Interpump Group

ZRCL Rotating Nozzles



SPECIFICATIONS

Max Pressure	5,800 PSI
Max Flow	12.0 GPM
Max Temp	185° F
Inlet Port Size	1/4" NPT-F or 1/2" NPT-F
Length	4.27"
Weight	0.75 lbs.
Materials	Tungsten Carbide, Brass, Urethane

BRASS COMPONENTS

EASY MAINTENANCE

FEATURES

- TUNGSTEN CARBIDE NOZZLE
- IDEAL FOR CLEANING
- EXTREMELY RELIABLE

PART NUMBERS

NOZZLE SIZE	INLET
#2.5	1/4" NPT-F
#3.0	1/4" NPT-F
#3.5	1/4" NPT-F
#4.0	1/4" NPT-F
#4.5	1/4" NPT-F
#5.0	1/4" NPT-F
#5.5	1/4" NPT-F
#6.0	1/4" NPT-F
#6.5	1/4" NPT-F
#7.0	1/2" NPT-F
	SIZE #2.5 #3.0 #3.5 #4.0 #4.5 #5.0 #5.5 #6.0 #6.5



NOZZLES





	FL	ow	CHA	R T
--	----	----	-----	------------

Orifice							PRESS	SURE (PS	5I)					
Size		1,450	1.812.5	2,175	2,537	2,900	3,262	3,626	3,987	4,351	4,712	5,075	5,437	5,800
#025		1.47	1.69	1.84	1.98	2.11	2.24	2.37	2.50	2.61	2.72	2.82	2.90	3.01
#030		1.79	2.00	2.22	2.37	2.56	2.72	2.85	2.98	3.11	3.24	3.38	3.48	3.61
#035		2.11	2.35	2.58	2.77	2.98	3.17	3.32	3.48	3.64	3.80	3.93	4.09	4.22
#040	Ξ	2.40	2.69	2.95	3.17	3.70	3.61	3.80	3.98	4.17	4.33	4.49	4.67	4.80
#045	(GPN	2.69	3.03	3.30	3.59	3.83	4.06	4.27	4.49	4.70	4.88	5.07	5.25	5.41
#050	ME	11.4	3.35	3.69	3.98	4.25	4.51	4.75	4.99	5.20	5.41	5.62	5.83	6.02
#055	٦.	3.01	3.69	4.06	4.38	4.67	4.96	5.23	5.49	5.73	5.97	6.20	6.41	6.60
#060	VOLU	3.61	4.04	4.41	4.78	5.09	5.41	5.70	5.99	6.26	6.52	6.76	7.00	7.23
#065]	3.90	4.38	4.78	5.17	5.03	5.86	6.18	6.49	6.78	7.05	7.31	7.58	7.81
#070]	4.20	4.77	5.15	5.57	5.94	6.31	6.65	7.00	7.29	7.60	7.89	8.16	8.42
#080		4.80	5.38	5.89	6.39	6.81	7.23	7.60	8.00	8.34	8.69	9.00	9.32	9.64
#100		6.02	6.73	7.37	7.97	8.50	9.03	9.51	9.98	10.43	10.85	11.25	11.65	12.04


For correct use, the delivery of nozzle must not exceed 95% of the pump delivery.

Zone for use of lances without shoulder support (reaction less than 33 ft. lbs.)

Zone for use of lances with shoulder support (reaction greater than than 33 ft. lbs.

PARTS LIST

Г

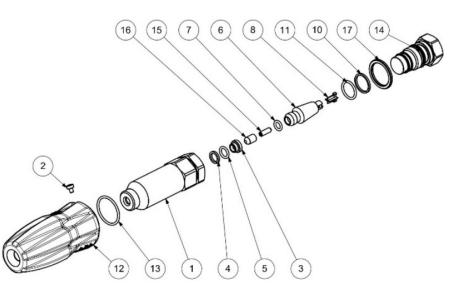


No.	Part No.	Description	Qty.
1	10095670	Body	1
2	99070200	Screw	1
3	10093607	Seat	1
4	90503300	O-ring	1
5	90357800	Anti-extrusion Ring	1
6	10056402	Rotor	1
7	90357400	O-ring	1
8	10045351	Vane	1

No.	Part No.	Description	Qty.
10	90508500	Anti-extrusion Ring	1
11	90359100	O-ring	1
12	10097251	Cover	1
13	90360200	O-ring	1
14	See Chart	Inlet Nipple	1
15	See Chart	Nozzle	1
16	See Chart	Rotor Tip	1
17	10095766	Seating Ring	1






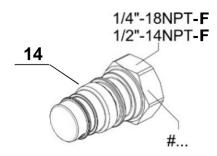

	1/4" NP	T-F Inlet	
Size	Nipple (14)	Nozzle (15)	Rotor (16)
#025	10096470	98660500	10093707
#030	10095370	98661500	10093707
#035	10095370	98667400	10093707
#040	10095270	98669000	10093707
#045	10095170	98672500	10093707
#050	10095170	98678000	10093707
#055	10095070	98682000	10093707
#060	10096570	98691500	10093707
#065	10096570	98693500	10093707
#070	10097170	98696300	10093707
#080	10097870		10098207
#100	10097970		10098307

ROTOR CHECK AND NOZZLE REPLACEMENT

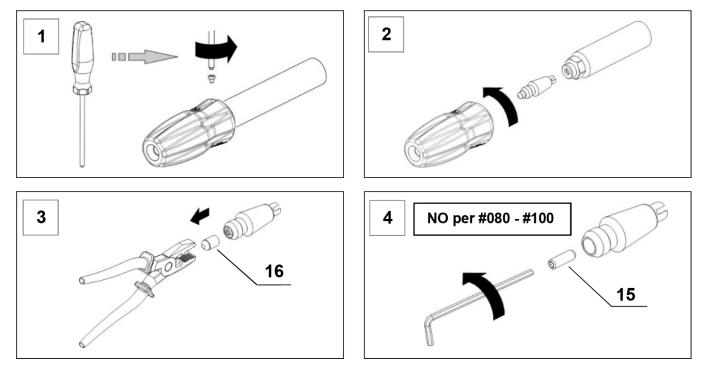



INSTRUCTIONS AND IMPORTANT INFORMATION

THIS DOCUMENT PROVIDES THE INSTRUCTIONS FOR THE INSTALLATION, USE AND MAINTENANCE OF THE ROTATING NOZZLE, THEREFORE IT IS AN INTEGRAL PART OF THE NOZZLE ITSELF AND MUST BE READ CAREFULLY BEFORE ANY USE AND KEPT WITH CARE.

STRICTLY COMPLY WITH THE INSTRUCTIONS CONTAINED IN THIS DOCUMENT IN VIEW OF A SAFE AND EFFECTIVE USE OF THE PRODUCT. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MIGHT CAUSE EARLY FAILURE AND RESULT IN SITUATIONS OF DANGER IN ADDITION TO VOIDING THE WARRANTY.

1. GENERAL INFORMATION

1.1 Since the rotation nozzle is an accessory to be used together with a lance being connected to a high pressure water system, it is necessary to pay the utmost attention when installing and in particular when using it, also in relation to the type of system.

1.2 In order to use the rotating nozzle, it is necessary to connect it to a lance end by means of the 1/4" NPT-F fitting. Manually screw the nozzle as much as possible onto the lance end, then tighten by means of a wrench (apply another 2or 3 turns). In order to ensure the seal, use a proper sealant on the thread.

1.3 Use soft and filtered water only. In case of salt water and/or of water containing solid particles of a size exceeding 360µm, the internal components of the nozzle would be subject to quick wear; furthermore this might compromise the correct functioning of the nozzle. Additional agents can be used in the water, provided that they are delicate, biodegradable and always complying with the regulations in force in the country where the nozzle is used.

1.4 The nozzle must be assembled and used by qualified staff only, who must have the required skills to handle high pressure systems and be informed of the functioning and of the behavior of the rotating nozzle.

WARNING: The high pressure water jet generated by the rotating nozzle can be harmful if improperly used. Do not use the rotating nozzle in case there are people and/or animals within its range of action.

1.5 When operating the nozzle to reach the pressure for normal working conditions, take care to direct it downwards.

1.6 During use, never exceed the maximum values of pressure, flow rate and temperature as stated in this document and indicated on the nozzle.

1.7 From time to time, it is necessary to check that the parts which are under pressure do not show cracks and/or leakages; the frequency of this check depends on the actual use. Mainly check the wear of the rotor and of the nozzle which is contained inside the rotor.

1.8 Maintenance and repair must be carried out by qualified and authorized staff only. **Replace the nozzle parts with original spare parts only.**

1.9 The rotating nozzle is entirely made of non-toxic and safe materials; however, in case of disposal, we suggest you do not dispose of it in the environment but take it to an authorized disposal center or contact General Pump Customer Service.

1.10 The rotating nozzle shall not be tampered with for any reason and/or used for any purpose other than the use it has been designed for. In case of tampering, as to the product functioning and safety.

