

# DFSCGK

## GUN MOUNTING KIT


### for Flat Surface Cleaners

FROM GENERAL PUMP

## DFSCGK

### Assembly

### Instructions

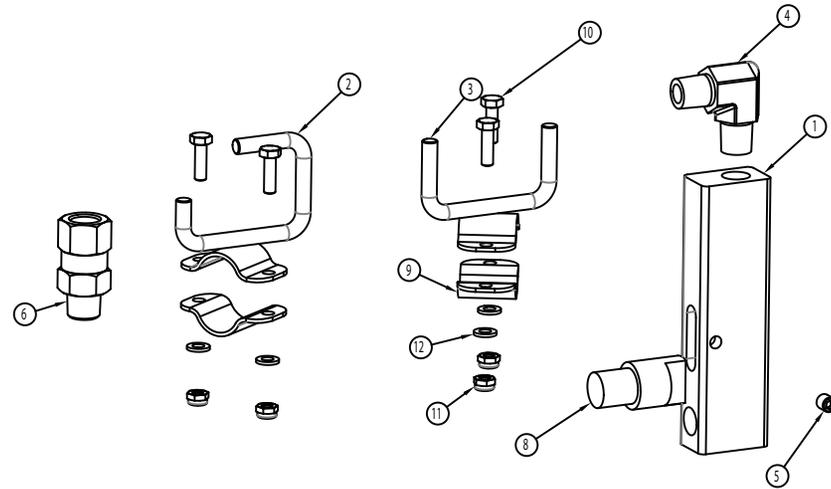

- **Mount a spray gun to your Flat Surface Cleaner.**
- **Kit mounts on the handle of your Flat Surface Cleaner.**
- **Requires no additional valve operation, making it easy to use. Simply pull the trigger of your spray gun or Flat Surface Cleaner to operate.**
- **Easy to install.**

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	2500020	MANIFOLD	1
2	2550172	BRACKET, GUN	1
3	2550173	BRACKET, LANCE	1
4	2452019	FITTING, 90 DEGREE	1
5	2200007	SCREW, SET, M8	1
6	D10066	SWIVEL	1
7	2103257	ASSEMBLY, HOSE (Not Shown)	1
8	2500021	BRACE	1
9	2550174	CLAMP, GUN/LANCE	2
10	2200095	BOLT, M6X20, SST	4
11	2200026	NUT, NYLOK, M6	4
12	2203401	WASHER, M6	4

Ref 300950 Rev.A  
08-14

Ref 300950 Rev. A  
08-14

### General Pump

1174 Northland Drive • Mendota Heights, MN 55120  
Phone: 651.686.2199 • Fax: 800.535.1745  
www.generalpump.com • sales@gpcompanies.com



General Pump is a  
member of the  
Interpump Group



## ASSEMBLY INSTRUCTIONS

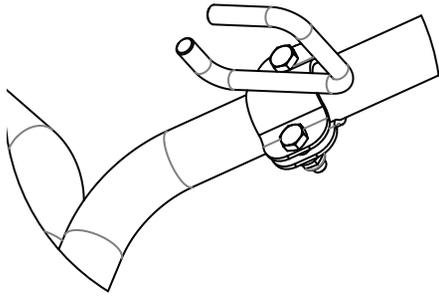


FIGURE 1

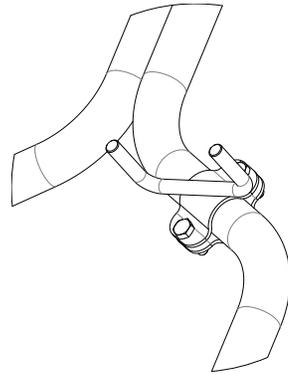


FIGURE 2

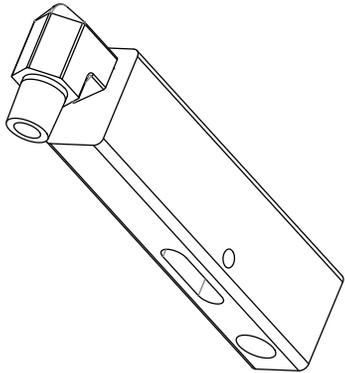


FIGURE 3

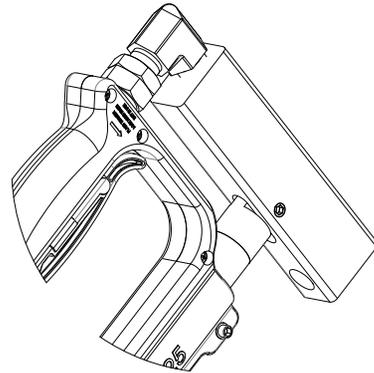


FIGURE 4

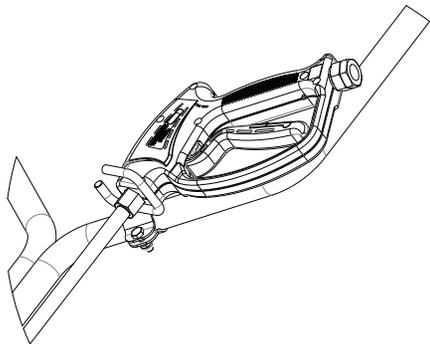


FIGURE 5



Kit shown attached  
to FSC

(FSC, Spray gun and lance  
not included)

1. Attach gun bracket to upper FSC handle in approximate location shown in **FIGURE 1**. Use clamp; (2) bolts, washers and nuts to secure.
2. Attach lance bracket to lower FSC handle in approximate location shown in **FIGURE 2**. Use clamp; (2) bolts, washers and nuts to secure. Gun and lance brackets need to line up on the handle.
3. Remove handle plug from end of the handle on gun side and replace it with the brace.
4. Loosen gun on the FSC handle and slide it toward the end of the handle.
5. Apply thread sealant to the fittings for the bottom of manifold. The fittings used depend on the hose outlet from your pump and the inlet of your gun.
6. Apply thread sealant to elbow and attach it to the top of manifold. Elbow must be parallel to long side of manifold and directed toward the slot. See **FIGURE 3**.
7. Apply thread sealant to the other end of the elbow and thread the manifold assembly into the FSC gun inlet. Manifold must tighten so the slot in the manifold slips into the brace when the gun is slid forward on the handle.
8. Slide the gun forward on the handle so the tab on the brace slides into the slot in the manifold. Tighten the gun on the handle and the set screw securing the brace into the slot. See **FIGURE 4**.

The hose from the pump connects to the fitting out the back of the manifold and the 4-foot hose supplied connects to the fitting on the manifold pointing toward the front of the FSC.

The swivel supplied with the kit connects to the inlet of your gun.

The gun and lance you use connect to the other end of the 4-foot hose. The end of the lance rests in the bracket at the bottom of the FSC handle. The gun rests in the bracket at the top of the handle and the gun also rests on the handle. See **FIGURE 5**.