

## AVAILABLE REPAIR KITS

Rotary Head Kit - Major:

P/N 2100372

Includes items 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15 and 17

Rotary Head Kit - Minor:

P/N 2100203

Includes items 8, 9, 11, and 13

Complete Rotary Head Kit:

P/N 2103226

Includes all items


Replacement nozzles

for arm 2103224:

925020M (3 required)




Photo of Rotary Head - Major as assembled.

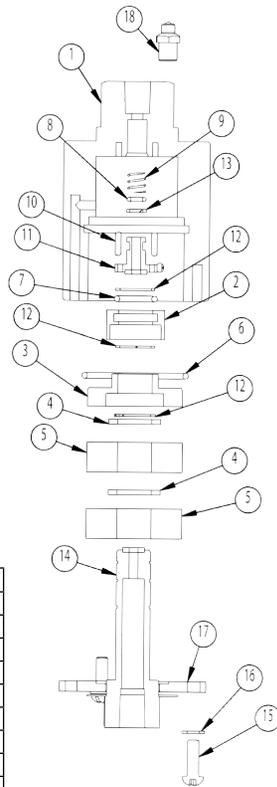

NO	PART NO	DESCRIPTION	QTY
1	2500014	HOUSING	1
2	2520030	RETAINER, BEARING	1
3	2520028	RETAINER, BEARING	1
4	2520027	SPACER, BEARING	2
5	2640004	BEARING	2
6	2701012	O-RING	1
7	2701011	O-RING	1
8	2701010	O-RING	1
9	2720007	SPRING	1
10	2530008	PIN	2
11	2530007	STEM, SMALL	1
12	2520029	SNAP RING	3
13	2710000	BACK UP RING	1
14	2520113	STEM	1
15	2200092	SCREW, M5 X 16	3
16	2200050	WASHER	3
17	2500018	RETAINER, BEARING	1
18	2640012	ZERK, GREASE	1

## HARDWARE KIT 2100253

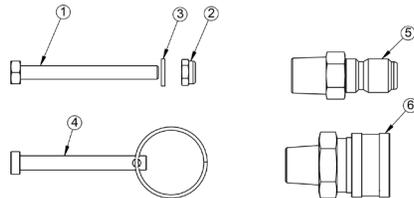

NO	PART NO	DESCRIPTION	QTY
1	2200058	HHCS, M6x60	2
2	2200026	NUT, NYLOK, M6	2
3	2200018	WASHER, M6	4
4	2202010	PIN, 55MM. W/RING, SS	2
5	D10079	PLUG, 3/8 x 3/8-M	1
6	D10075	COUPLER, 3/8 x 3/8-M	1


Ref 300918 Rev. J  
02-21

# THE HAMMERHEAD PROFESSIONAL FLAT SURFACE CLEANER

## FROM GENERAL PUMP

- **COMPENSATING GUN FEATURE**
- **FULL 22" CLEANING PATH**
- **HEAVY-DUTY ANODIZED ALUMINUM COMPONENTS**
- **RUGGED STAINLESS STEEL COVER, HANDLE & CASTERS**
- **3 nozzle rotating arm & optional 2 nozzle arm**

## DCFSCS22Z OPERATOR'S MANUAL

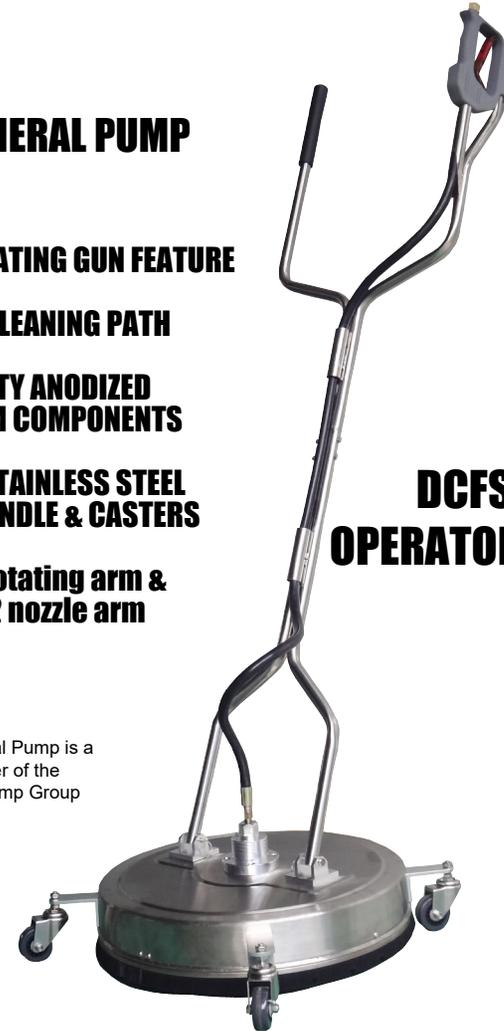

General Pump is a member of the Interpump Group

Ref 300918 Rev. J  
02-21



### **WARNING: Read Before Operating Machine**

**Always wear protective eyewear**  
**Keep clear of rotating nozzles**  
**Never lock trigger gun open with any device**  
**Drain water in cold weather to avoid freezing**  
*Tampering with any part of this machine will void all warranties*



## Operating Instructions

1. Connect inlet filter to FSC gun inlet.
2. Connect to Pressure Washer.
3. Turn water on and open valve. Open trigger gun for flow of water through nozzles. Nozzles must have flowing spray. If not, remove tips and clean; reassemble, making sure that groove of nozzle is parallel to spray bar. Use thread sealant when installing nozzles.
4. Start Pressure Washer. The Hammerhead is ready for operation.
5. Walk slowly behind the Hammerhead cleaning as you go. If striping occurs, slow down your pace.
6. Periodically check weep hole on bottom of swivel. Water will seep slowly; if water shoots out, stop and replace seals. Swivel assembly can be rebuilt.
7. For maximum effectiveness keep spray tips clean. If the machine vibrates, stop and clean spray tips.
8. Grease the swivel with one or two grease gun pumps every 200 hours (or once about every 30 days of use).

### SWITCHING OUT / REPLACE NOZZLE ARM

1. Be sure the flat surface cleaner is disconnected from any pressure system and is drained of fluids.
2. Flip the deck over to expose arm and swivel base.
3. Using a 24mm or adjustable wrench, hold the swivel base and rotate the arm counter-clockwise to remove.

\*BE CAREFUL NOT TO BEND ARM IN THIS PROCESS\*

4. Prep the new arm with proper thread sealant or thread tape for stainless steel.
5. Using a 24mm or adjustable wrench, hold the swivel base and rotate the arm clockwise to in stall, torque 2 turns past finger tight.

\*BE CAREFUL NOT TO BEND ARM IN THIS PROCESS\*

6. Flip the deck back to the correct position. The flat surface cleaner is now ready for operation.

- 2 nozzle arm: contains quantity 2, #2.0 nozzles which is a #4.0 nozzle equivalent.
  - 3 nozzle arm: contains quantity 3, #2.0 nozzles which is a #6.0 nozzle equivalent.
- \* REFER TO GP'S NOZZLE CHART FOR PROPER FITMENT\*

**NOTE: After 50 hours of use, remove the inlet filter, take apart and clean filter screen.**

**DO NOT ALLOW MACHINE TO REMAIN STATIONARY  
ON SOFT SURFACES SUCH AS WOOD.**


**Caution:** Striking any raised obstacle during operation will damage machine. If contact does occur and results in vibration when operating machine, STOP and replace spray bar. Continued operation could result in serious injury or damage to machine.

Operating Pressures: 1,000 to 5,000 PSI  
 Max Flow: 8.0 GPM  
 Dimensions: 70" x 23" x 23"  
 Weight: 24.5 lbs.

### General Pump

1174 Northland Drive • Mendota Heights, MN 55120  
 Phone: 651.686.2199 • Fax: 800.535.1745  
 www.generalpump.com • sales@gpcompanies.com

Ref 300918 Rev. J  
 02-21

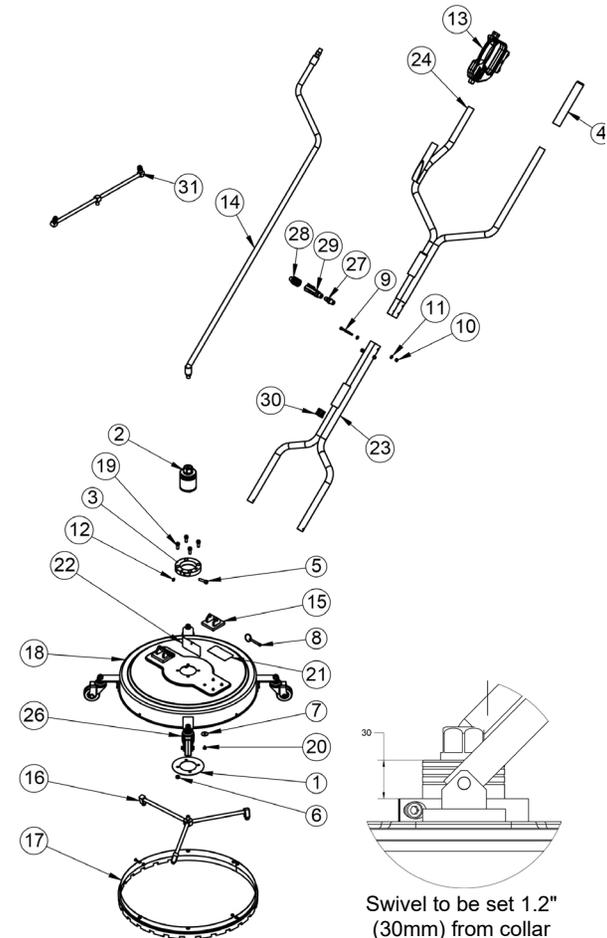

Swivel to be set 1.2"  
(30mm) from collar

NO	PART NO	DESCRIPTION	QTY	NO	PART NO	DESCRIPTION	QTY
1	2630010	Plate, Retaining	1	16	2103224	Arm, Rotary, FSC	1
2	2103226	Swivel	1	17	2103223	Assy, Brush	1
3	2500017	Collar, Split	1	18	2540070	Deck, FSC, SST	1
4	2660047	Grip, Handle	1	19	2200093	SHCS	4
5	2200055	SHCS, M8 x 30	1	20	2200094	Bolt, M6	8
6	2200053	Nut, M8 x 1.25	4	21	2400007	Label, Grease	1
7	2203406	Washer, M6	8	22	2400013	Label, Swivel	1
8	2202010	Pin, 55 mm, W/Ring, SS	2	23	2550161	Handle, Lower	1
9	2200058	HHCS, M6 x 60	2	24	2550160	Handle, FSC, Upper	1
10	2200026	Nut, Nylok, M6	2	25	2660224	Plug, Handle	1
11	2200018	Washer, M6	4	26	2103228	Caster Kit, SS	1
12	2203507	Washer	1	27	D10079	Plug, 3/8" x 3/8"-M	1
13	DCG5000FSC	Gun, FSC	1	28	D10075	Coupler, 3/8" x 3/8"-M	1
14	2702000	Hose, FSC	1	29	D40015	Filter, In-line, SST	1
15	2500016	Block, Handle	2	30	2660297	Grommet, FSC Handle	2
				31	2103287	ASSY, 2 ARM, FSC 22", SST	1

Ref 300918 Rev. J  
 02-21